




TOMAHAWK ^{VX}

1/10 SCALE NITRO POWERED 4WD TOURING CAR SERIES
1:10 引擎動力四驅房車系列

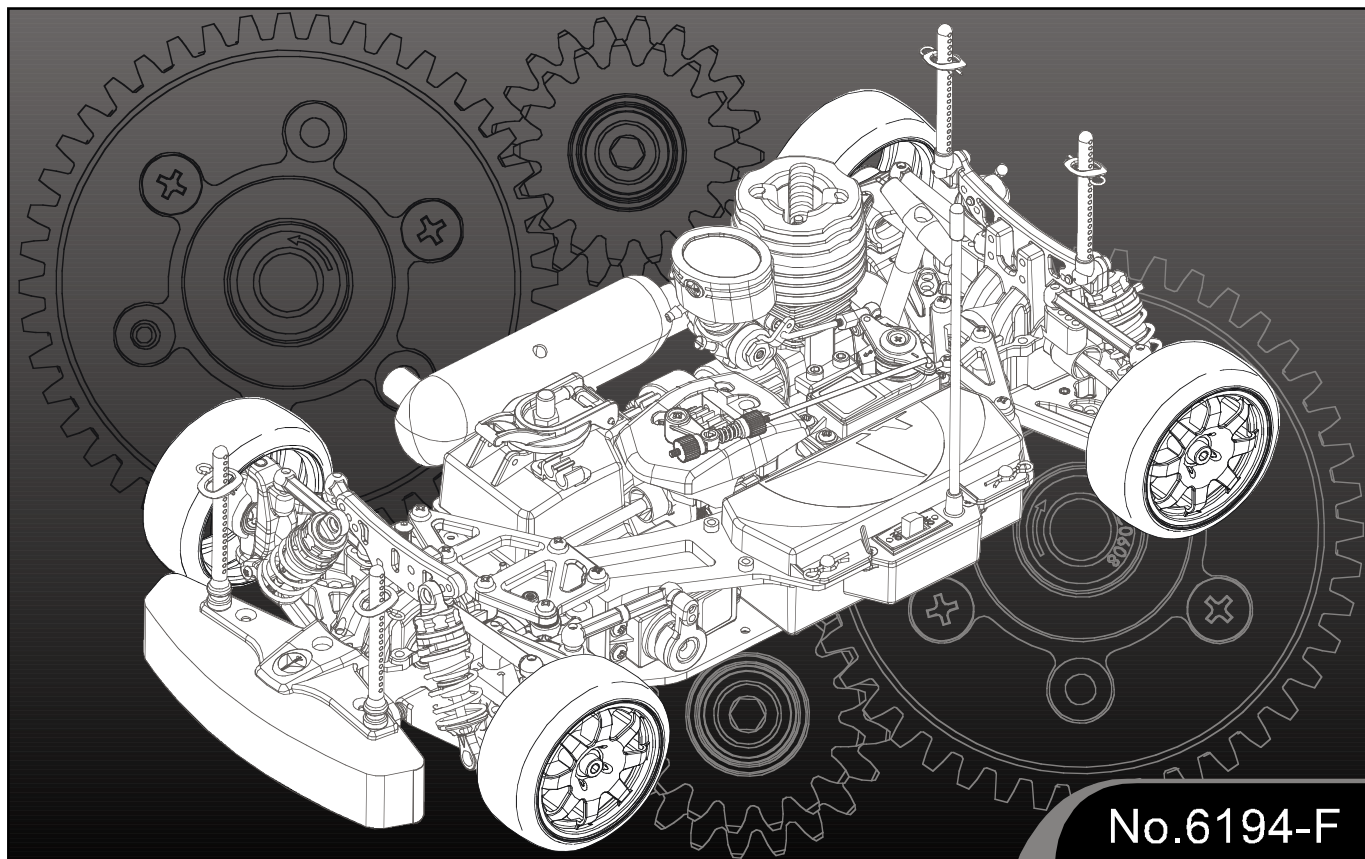

No.6194-F



This radio control model car is not a toy! Before beginning assembly, please read this manual thoroughly.
本產品為高性能模型非一般玩具，組裝與操作前請詳閱本產品說明書。

The contents are subject to change without prior notice due to product improvements and specification changes.
本套件所附之零件可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之原因，我們將保留產品規格變更權力，不再另行通知使用者。

Maintenance Manual & Parts Catalogue

維修說明書及零件包型錄

Introduction 前言

Thank you for purchasing this Thunder Tiger product. This manual contains the steps and instructions required to assemble your car. Please read this manual completely before attempting to start maintenance. Follow the directions in this manual closely to reduce problems during operation. We offer online help on our www.acehobby.com or www.thundertiger.com and forums and our product specialists are ready to take your call if you have any technical questions. Have fun and enjoy the exciting world of R/C.

感謝您購買雷虎科技TOMAHAWK VX引擎四驅房車。雷虎科技一向以提供最高品質的產品及服務作為持續努力的目標，並藉由參與競賽及重覆測試產品，不斷累積經驗，進而提昇設計及製造品質，期望能呈現給您最頂級之工藝產品。本使用說明書包含了組裝及維修本產品前所需注意的重要事項，建議您在開始組裝及維修本產品之前，能詳閱此說明書，並熟悉本產品之組裝步驟及維修程序。若是您在產品的使用上有任何的疑問，歡迎多加利用我們所提供的24小時諮詢留言版或洽詢雷虎科技授權經銷商。雷虎科技的全球英文網址為www.thundertiger.com 中文網址為www.tiger.com.tw，我們將竭誠為您服務！

Under Safety Precautions 安全注意事項

Please read all of the instructions and familiarize yourself with the product and its controls before operation.

1. This product is not a toy. It is a high performance model car therefore it is important to familiarize yourself with the model, its manual, and its construction before assembly or operation. Adult supervision is necessary for children operating this model.
2. Always keep this instruction manual on hand during assembly and for operating reference.
3. Do not use a power screwdriver to install screws into plastic parts. A power screwdriver's high rotation speed can heat up the screw being installed which can result in some melting of the plastic parts or stripped threads.
4. For best performance, it is important to make sure all the moving parts can move freely without binding.
5. This product, its parts, and its assembly tools can be harmful to your health. Always exercise extreme caution when assembling and operating this product. Keep away from any high speed rotating parts during operation.


感謝您購買雷虎科技產品，在您開始操作本產品前，請詳閱本產品說明書。

1. 本產品為高性能模型產品非一般玩具，組裝與操作過程皆須由成人陪同。請詳讀此本使用說明書，避免因組裝錯誤與操作不當造成損壞。
2. 請妥善保管此說明書，對於後續維修、操控說明將可提供您協助。
3. 請勿使用電動工具旋緊自攻螺絲於塑膠零件上，可能導致塑膠零件融化或滑牙。
4. 請檢視所有活動部位零件是否不受干涉，可靈活作動，以達到車輛最佳性能。
5. 此項產品具有相當之危險性，於組裝、調整、操控上的不熟悉都可能造成自身或他人的傷害，當發生這些傷害事件時製造商是可以免除責任的，建議您於初次使用本產品前，先行請教具有相當程度經驗同好或是專業雷虎經銷商與模型專賣店。


Index 索引

Manual Format 說明書使用方式 -----	P.2	STEP13 Installation of Front End 結合前擺臂懸吊組 -----	P.17
Symbols Used Throughout The Manual 符號說明 -----	P.2	STEP14 Installation of 2-Speed Transmission Unit 結合2段變速組 -----	P.18
STEP1 Front Differential 前差速組 / Rear Differential 後差速組 -----	P.3	STEP15 Installation of Fuel Tank 結合油箱 -----	P.18
STEP2 2-Speed Transmission Unit 2段變速組 -----	P.3	STEP16 Engine Set 引擎與離合器罩 -----	P.19
STEP3 Front Differential Unit 前差速箱 -----	P.5	STEP17 Muffler & Fuel Tube 消音器與油管 -----	P.20
STEP4 Front Suspension 前擺臂懸吊組 -----	P.5	STEP18 Throttle/Brake Linkage 伺服機油門 / 煞車連桿 -----	P.20
STEP5 Rear Differential Unit 後差速箱 -----	P.7	STEP19 Front Bumper 前防撞板 / Front Body Mounts 前車殼支柱 -----	P.21
STEP6 Rear Suspension 後擺臂懸吊組 -----	P.8	STEP20 Tire / Wheels 輪胎及輪轂 -----	P.21
STEP7 Shock Absorber 避震器組 -----	P.10	STEP21 Body Shell 車殼 -----	P.22
STEP8 Steering Bellcrank 轉向曲柄組 -----	P.12	TOMAHAWK EXPLODED VIEW 爆炸圖檢索 -----	P.23
STEP9 Steering Servo 轉向伺服機 / Throttle/Brake Control Servo 油門 / 煞車伺服機 -----	P.13	TOMAHAWK VX PART LIST 零件表及圖示 -----	P.27
STEP10 Radio Box 電池盒 -----	P.14	TOMAHAWK VX OPTION PART LIST 改裝零件表及圖示 -----	P.33
STEP11 Installation of Rear End 結合後擺臂懸吊組 -----	P.16	WHEEL & TIRE OPTION PART LIST 輪轂和輪胎改裝零件表及圖示 -----	P.34
STEP12 Installation of Radio Box 結合電池盒 -----	P.16		

Tools Included 內附工具

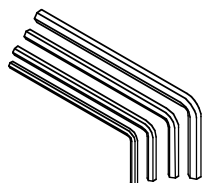


Hex Wrenches
1.5 / 2.0 / 2.5 / 3.0mm
六角板手組

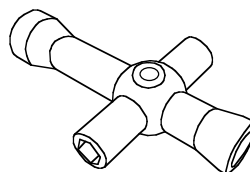


4-Way Cross Wrench
十字套筒

Tools Required For Assembly 組裝維修工具



Philips Screwdrivers
(L/M/S)
十字起子

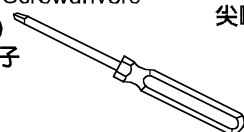

Needle Nose Pliers
尖嘴鉗

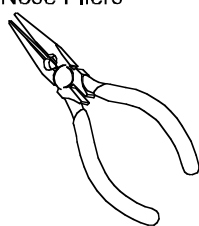

Wire Cutter
斜口剪

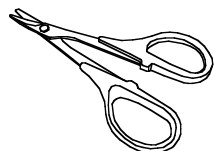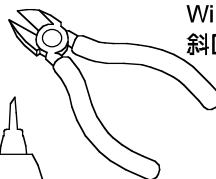


Lexan Body Curved Scissor
車殼專用剪




Ruler
尺



 
Super Glue
(CA Glue)
快乾膠



Thread Locking Adhesive
(Threadlocker)
螺絲防鬆膠

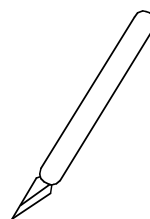

Hobby Knife
模型用切割刀

 


Grease
潤滑油膏 (黃油)

Manual Format 說明書使用方式

How to read the instruction manual? 說明書導讀

- A:** Indicates the assembly step number and the parts that are to be assembled.
 - B:** Displays actual size drawings, and part quantities used.
 - C:** All parts, except screws, are identified by its order numbers. When purchasing spare parts, identify the part required and cross reference this to the spare parts list in the end of this manual, which shows the purchasable spare parts and the corresponding order numbers.
 - D:** This instruction manual uses several symbols. Pay careful attention to them during construction. Details are given at the bottom of each page.
- A:** 顯示組立步驟及需組立之零件部位
 - B:** 零件實際對照尺寸及使用數量
 - C:** 請比對零件形狀以及後附零件料號對照圖示找出需求零件料號
 - D:** 操作說明符號可更有效協助組裝者使用此說明書，請依說明書符號指示進行組裝步驟

Example 說明範例

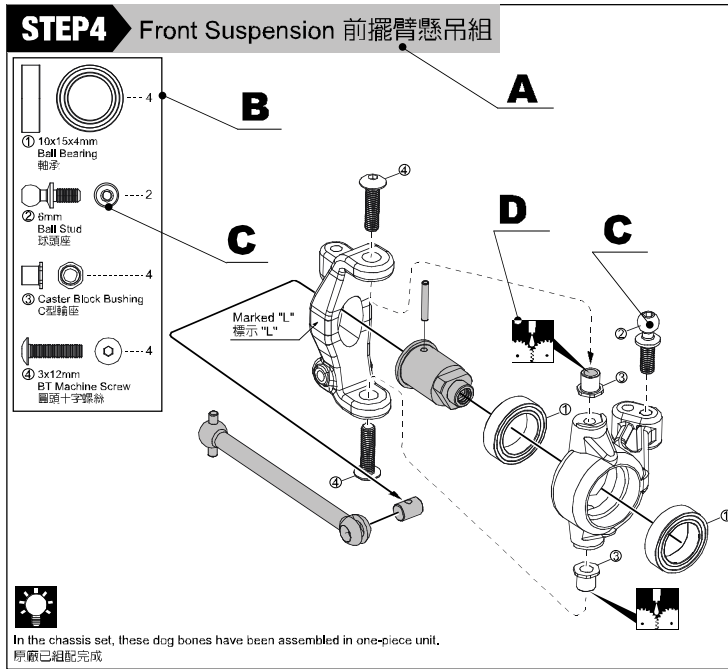

Symbols Used Throughout The Manual 符號說明



Apply C.A Glue
使用快乾膠黏合



Apply silicon oil
使用模型專用矽油



Assemble as many times as specified
依指示組裝所需數量



Assemble left and right side the same way
左右側組件相同



Assemble in right order
依標示順序組裝



Drill holes with the specified diameter
依標示尺寸鑽孔



Hint
組裝提示



Must be purchased separately
改裝品需另購



Cut off shaded portion
依標示部分裁切



Ensure smooth, non-binding movement when assembling
確認組件靈活度



Pay close attention here
注意組裝步驟



Cut off excess
裁剪多餘部分






 



Apply threadlocker
使用螺絲防鬆膠



Apply grease
使用潤滑油膏(黃油)

STEP1 Front Differential 前差速組 / Rear Differential 後差速組

-  8
① 2.5x14mm F/H Philip Machine Screw 平頭十字螺絲
-  4
② 8x14x4mm Ball Bearing 軸承
-  4
③ 3x5mm Washer 墊圈
-  4
④ 5x8mm Washer 墊圈
-  4
⑤ 4.4x0.8mm O-Ring O型環
-  2
⑥ 3x19mm Pin 銷

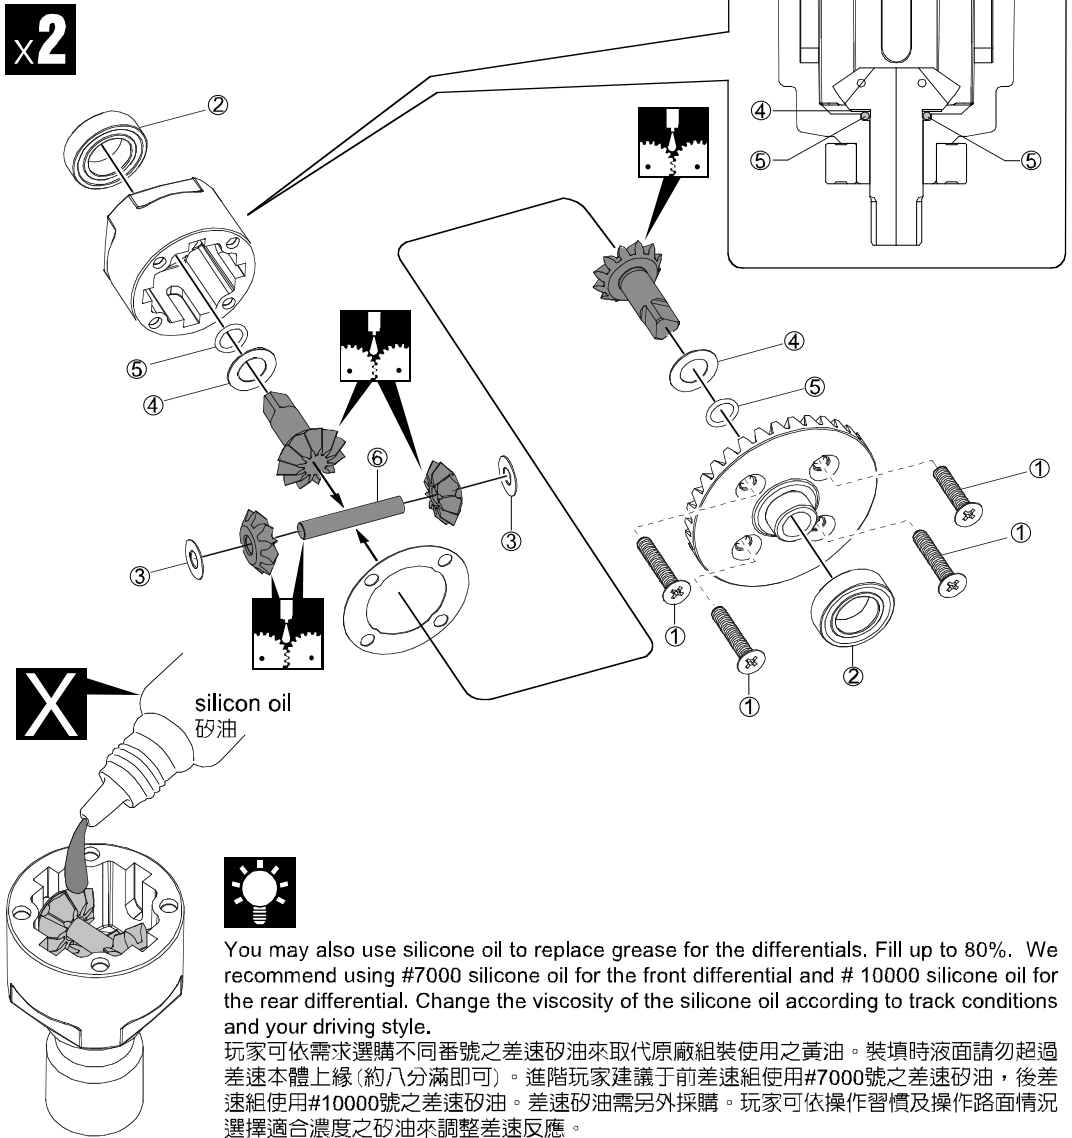

You may also use silicone oil to replace grease for the differentials. Fill up to 80%. We recommend using #7000 silicone oil for the front differential and # 10000 silicone oil for the rear differential. Change the viscosity of the silicone oil according to track conditions and your driving style.

玩家可以依需求選購不同番號之差速矽油來取代原廠組裝使用之黃油。裝填時液面請勿超過差速本體上緣(約八分滿即可)。進階玩家建議于前差速組使用#7000號之差速矽油, 後差速組使用#10000號之差速矽油。差速矽油需另外採購。玩家可依操作習慣及操作路面情況選擇適合濃度之矽油來調整差速反應。


STEP2 2-Speed Transmission Unit 2段變速組

-  1
① 2 Speed Spring 2段變速彈簧
-  1
② 3mm Clutch Steel Ball 離合甩片鋼珠
-  1
③ 3x6mm Cap Screw 彈簧固定螺絲



Put the clutch steel ball into the hole on the 2-Speed clutch. Next, tighten the set screw to the 2-Speed spring until the spring bottoms out, then unscrew 1 1/2-1 3/4 turns. This is the factory setting of the 2-Speed. Adjust accordingly to track conditions.


將離合甩片鋼珠及彈簧依序放入離合器本體, 將固定螺絲鎖到底後再鬆開1 1/2-1 3/4圈(注意! 請勿將固定螺絲鎖死, 如此將造成彈簧失效), 進階玩家可依場地需求調整換檔時間。

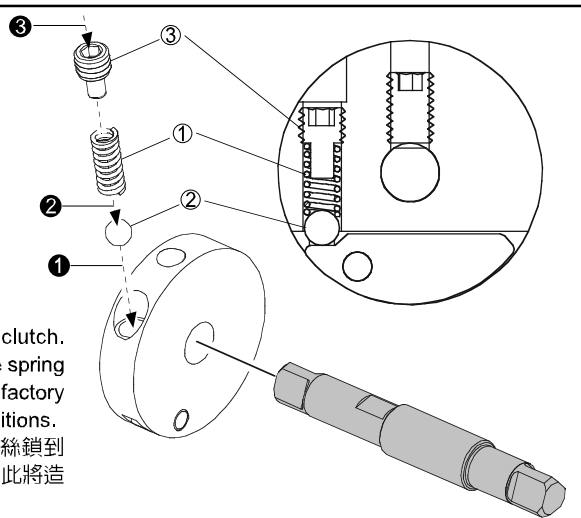


 Hint 組裝提示

 Must be purchased separately 改裝品需另購

 Apply grease 使用潤滑油膏(黃油)

 Assemble in right order 標示依順序組裝

 Assemble as many times as specified 依指示組裝所需數量

STEP2 2-Speed Transmission Unit 2段變速組

① 2.9x1.8mm O-Ring
O型環

② 5x14x5mm Ball Bearing
軸承

③ 6x9mm Washer
墊圈

④ 2.5 x 5 mm F/H Philip Machine Screw
平頭十字螺絲

⑤ 4x6mm Set Screw
無頭內六角固定螺絲

⑥ 2.9x1.8mm O-Ring
O型環

Firmly tighten the set screw onto the flat spot.
將固定螺絲鎖附於變速軸平面上

STEP2 2-Speed Transmission Unit 2段變速組

① 3x25mm BT Philip Machine Screw
圓頭十字螺絲

② Brake Cam
煞車凸輪

③ Brake Pad
煞車夾片

④ Brake Screw
煞車夾片固定螺絲

Note Direction
This side face forward.
此面朝前

Top View
上視圖






 
Brake Disc
煞車片



Apply threadlocker
使用螺絲防鬆膠

Assemble in right order
標示依順序組裝




Pay close attention here
注意組裝步驟


STEP3 Front Differential Unit 前差速箱

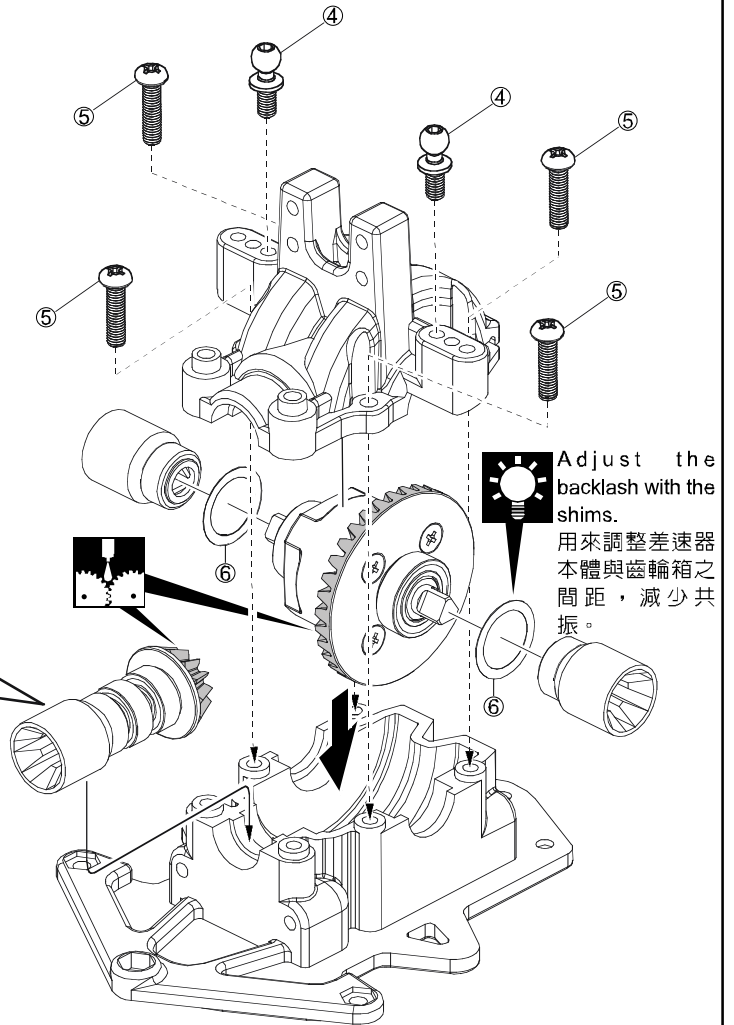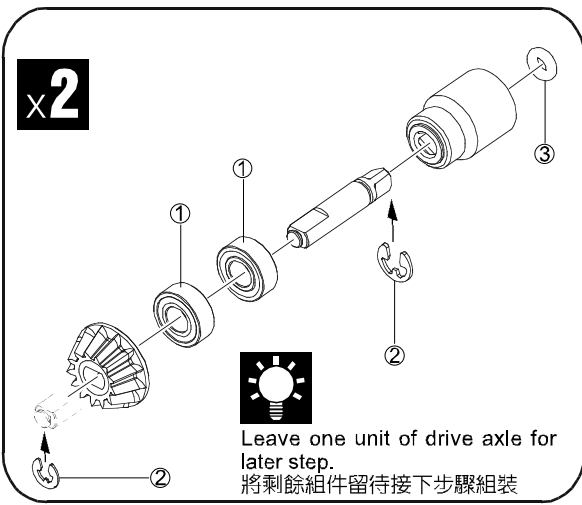- | | | | |
|---|---------|---|---------|
|  | 2 |  | 2 |
| ① 5x11x4mm
Ball Bearing
軸承 | | ④ 6mm(L)
Ball Stud
球頭座 | |
|  | 1 |  | 4 |
| ② 2.5mm
E-Clip2
E型扣環 | | ⑤ 3x12mm
BT Philip Machine Screw
圓頭十字螺絲 | |
|  | 2 |  | 2 |
| ③ 2.9x1.8mm
O-Ring
O型環 | | ⑥ 14x10.5x0.1mm
Diff Shim
差速箱墊片 | |


 


STEP4 Front Suspension 前擺臂懸吊組


- | | |
|---|---------|
|  | 2 |
| ① Inner Hinge Pin
擺臂軸 | |
|  | 2 |
| ② 6mm(S)
Ball Stud
球頭座 | |
|  | 4 |
| ③ 3x10mm
F/H Philip Machine Screw
平頭十字螺絲 | |

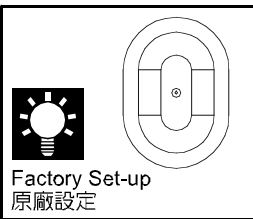

 Roll center adjustment refers to Page 8
滾動中心的調整請參考第8頁之說明

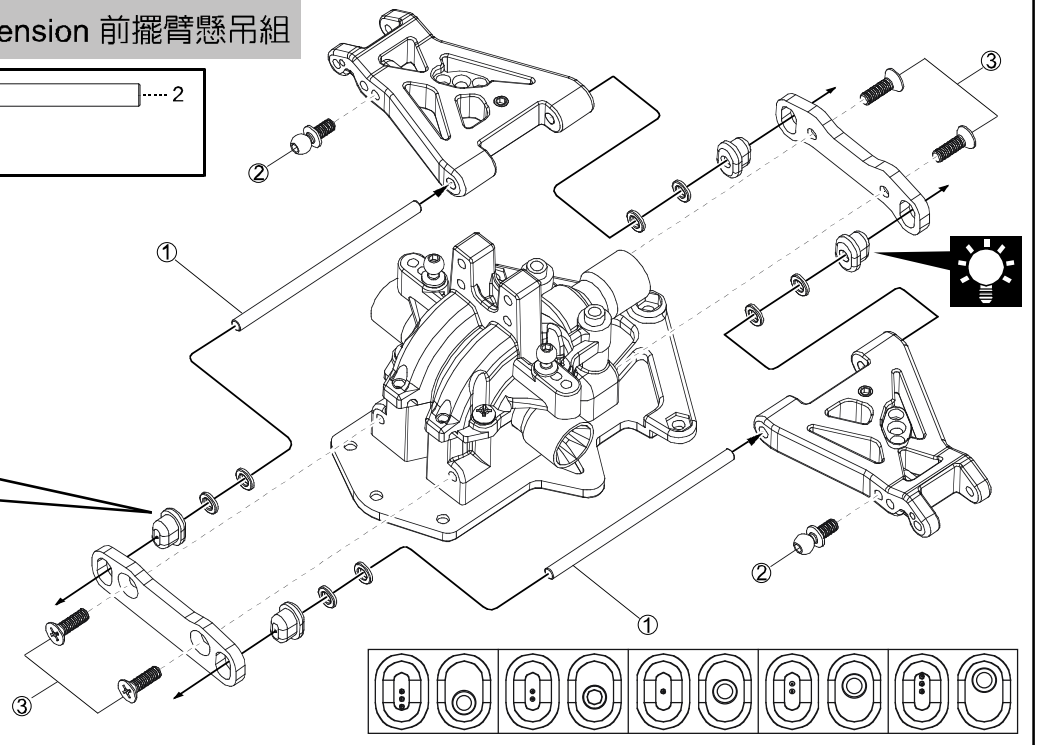



 Hint
組裝提示


 Apply grease
使用潤滑油膏(黃油)

x2 Assemble as many times as specified
依指示組裝所需數量

STEP4 Front Suspension 前擺臂懸吊組





<Front Shock Tower>
<前避震器支架>

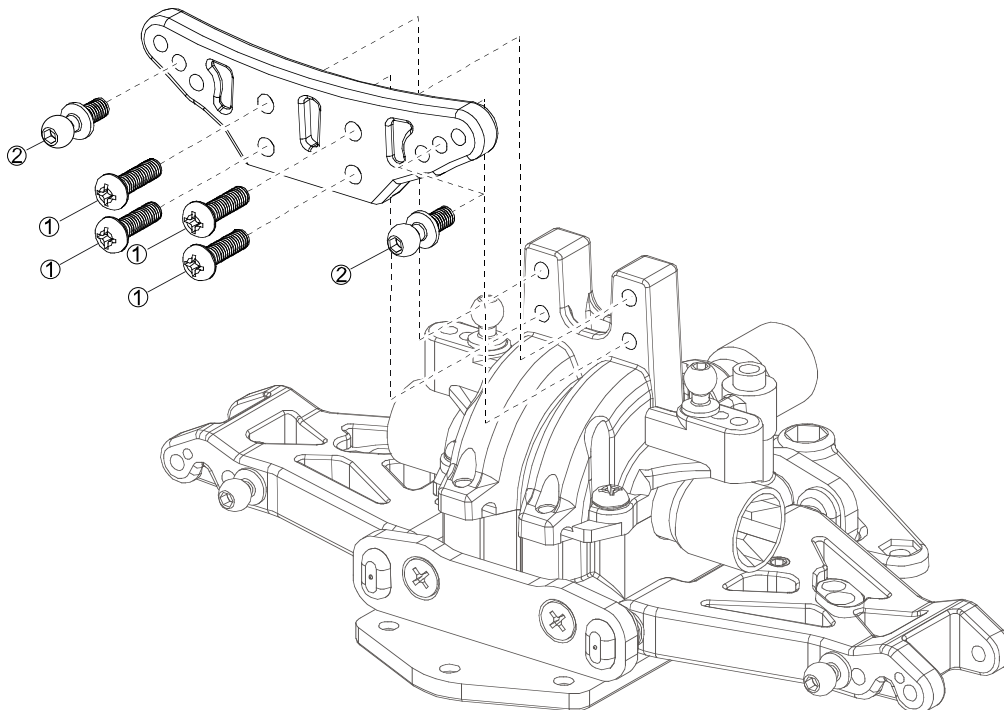
-  4
① 3x10mm
BT Philip Machine Screw
圓頭十字螺絲
-  2
② 6mm(L)
Ball Stud
球頭座




STEP4 Front Suspension 前擺臂懸吊組
 
<For Right>
<右側組件>

-  4
① 10x15x4mm
Ball Bearing
軸承
-  2
② 6mm(L)
Ball Stud
球頭座
-  4
③ Caster Block Bushing
C型輪座
-  4
④ 3x12mm
BT Machine Screw
圓頭十字螺絲

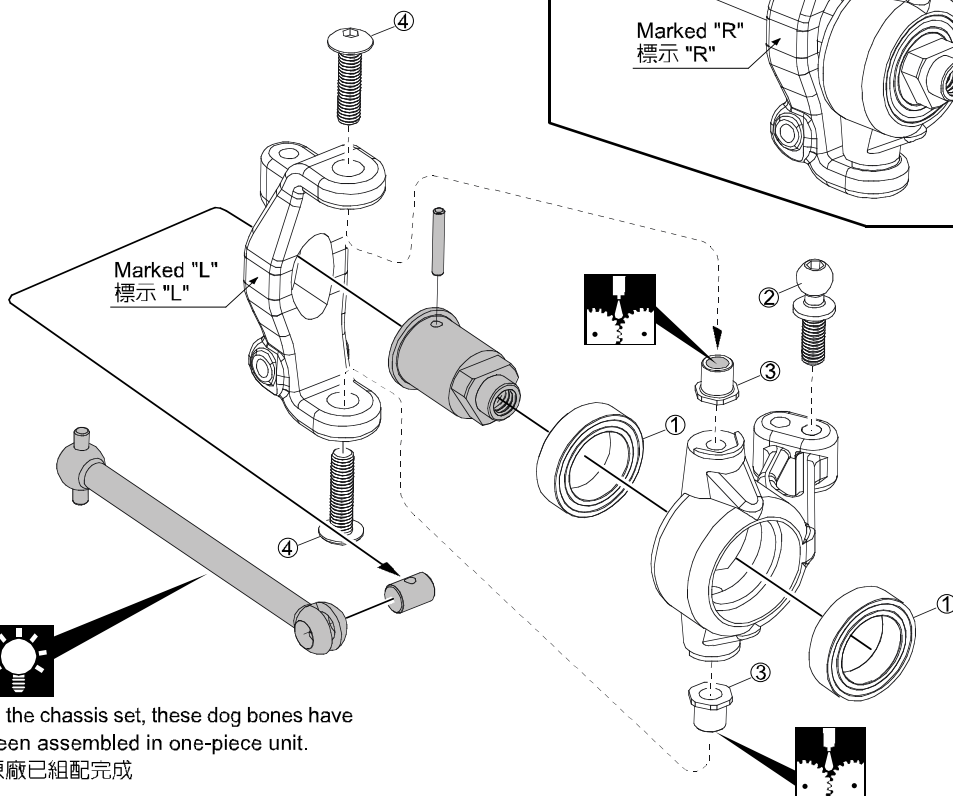

In the chassis set, these dog bones have been assembled in one-piece unit.
原廠已組配完成



 
 Assemble left and right side the same way
左右側組件相同


 Hint
組裝提示

 Apply grease
使用潤滑油膏(黃油)




STEP4 Front Suspension 前擺臂懸吊組




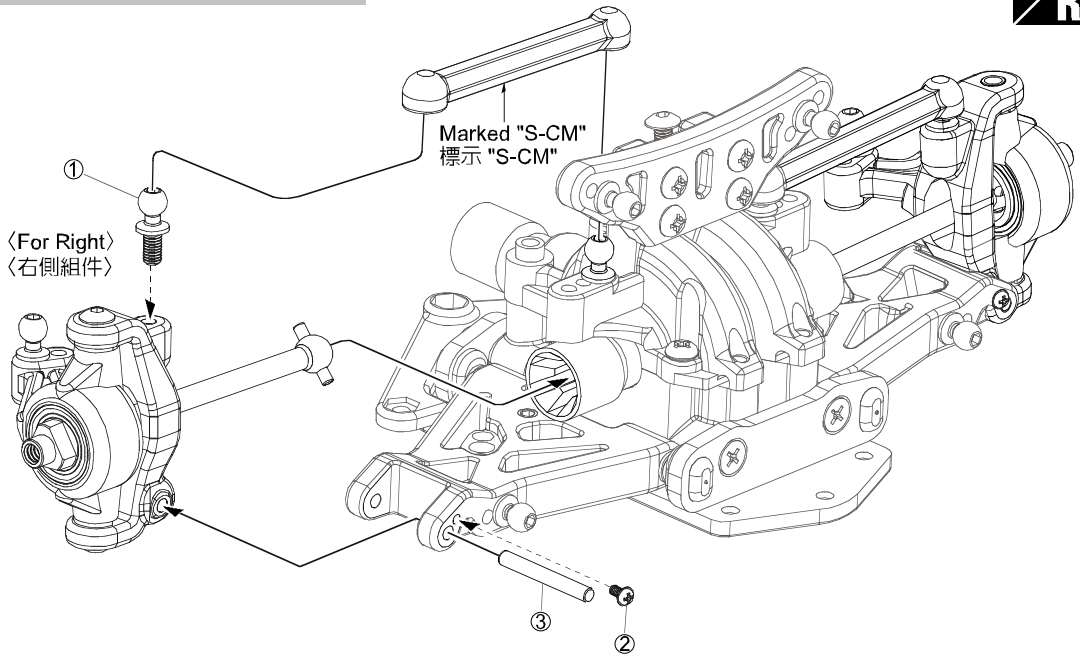
-  2
① 6mm(L) Ball Stud 球頭座
-  2
② 2x4mm BT Self-Tapping Screw 圓頭十字墊圈螺絲
-  2
③ 2.5x20mm Outer Hinge Pin (Front) 輪座固定軸



STEP5 Rear Differential Unit 後差速箱

-  2
① 6mm(L) Ball Stud 球頭座
-  4
② 3x12mm BT Philip Machine Screw 圓頭十字螺絲
-  2
③ 14x10.5x0.1mm Diff Shim 差速箱墊片

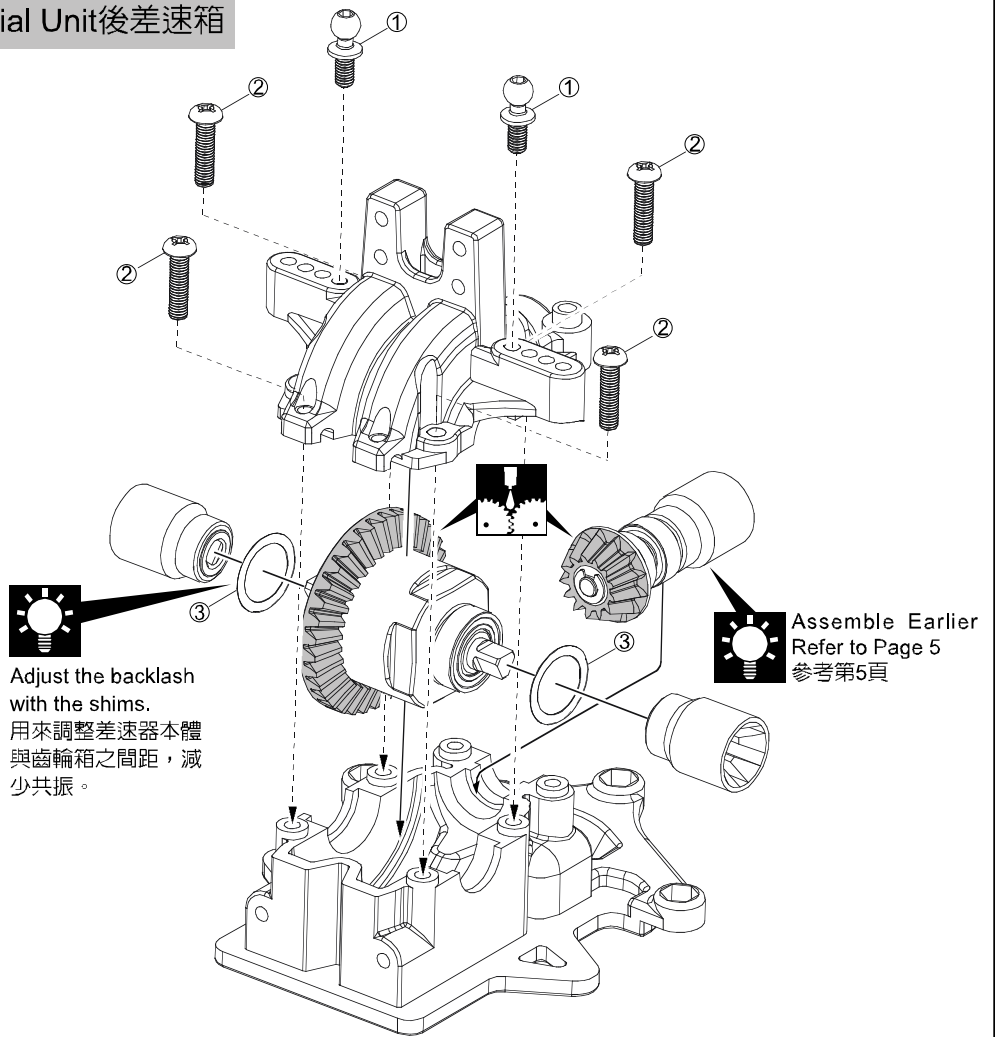

 Assemble left and right side the same way 左右側組件相同

 Apply grease 使用潤滑油膏(黃油)


 Hint 組裝提示

STEP6 Rear Suspension 後擺臂懸吊組

Roll Center Adjustment: 調整滾動中心




By replacing the suspension arm mount bushings (setup of roll center), you can acquire different handling and steering responses according to the different track conditions. The kit included various spare bushings for your further replacement. 藉由更換擺臂軸套來改變車子的滾動中心之高低有助於穩定方向與控制轉向以適應不同路面及操控之需求。

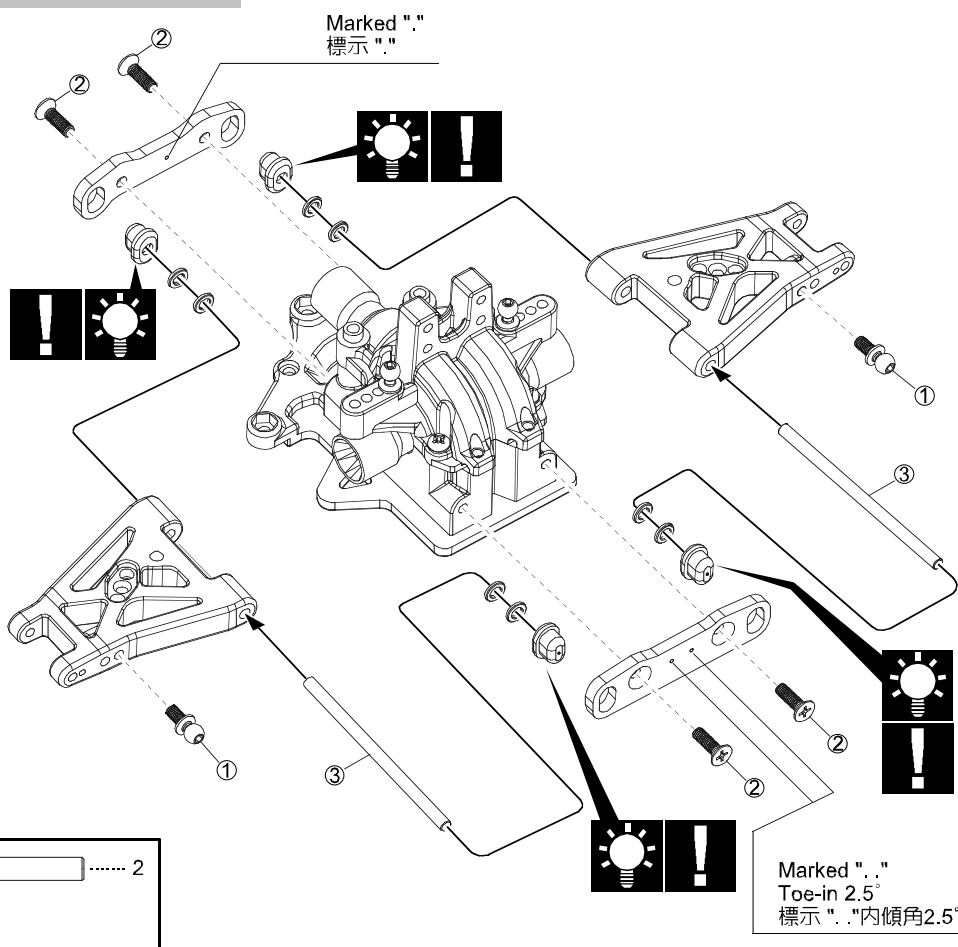

- 2
① 6mm(S) Ball Stud 球頭座
- 4
② 3x10mm F/H Philip Machine Screw 平頭十字螺絲
- 2
③ Inner Hinge Pin 擺臂軸

STEP6 Rear Suspension 後擺臂懸吊組

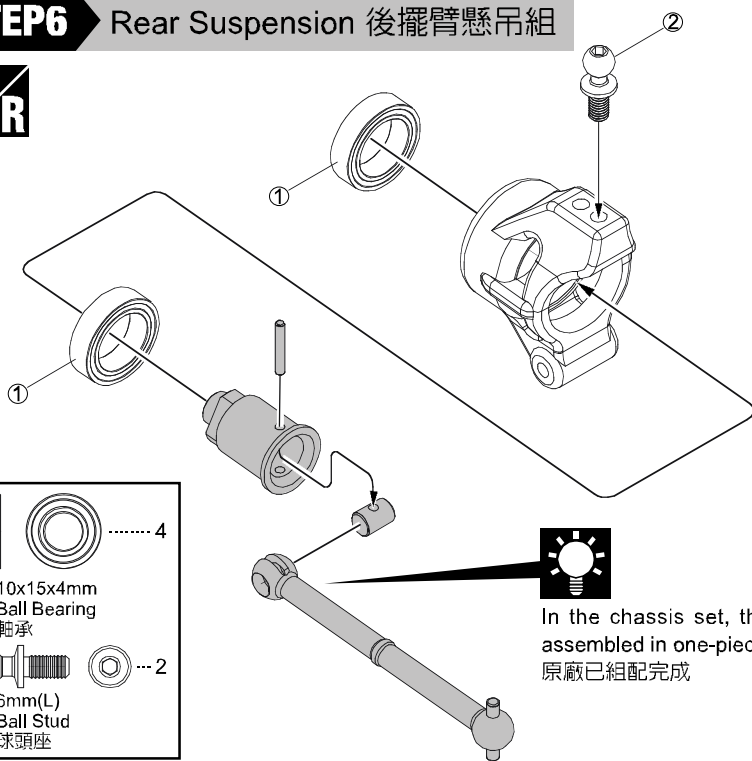

- 4
① 10x15x4mm Ball Bearing 軸承
- 2
② 6mm(L) Ball Stud 球頭座

In the chassis set, these dog bones have been assembled in one-piece unit. 原廠已組配完成

! Always adjust the front and rear bushings at the same time. You car may not run stable if front and rear bushings are unbalanced. 調整時請同時更換前後擺臂軸套。不平衡的設定將增加車輛行駛的不穩定性。

Roll Center Position	Low	Mid. Low	Medium (Factory Set-up)	Mid. High	High
滾動中心位置	最低	偏低	中間 (原廠設定)	偏高	最高
arm mount bushings 擺臂軸套					
Track	Low Speed Track ← → High Speed Track				
路況	多彎 ← → 高速路面				

L/R Assemble left and right side the same way 左右側組件相同




Hint 組裝提示



Pay close attention here 注意組裝步驟


STEP6 Rear Suspension 後擺臂懸吊組

- ① 6mm(L) Ball Stud (PD9104)
球頭座
- ② 3x10mm BT Philip Machine Screw
圓頭十字螺絲
- ③ 2x4mm BT Self-Tapping Screw w/washer
圓頭十字墊圈螺絲
- ④ 2.5x22mm Outer Hinge Pin (Rear)
擺臂軸

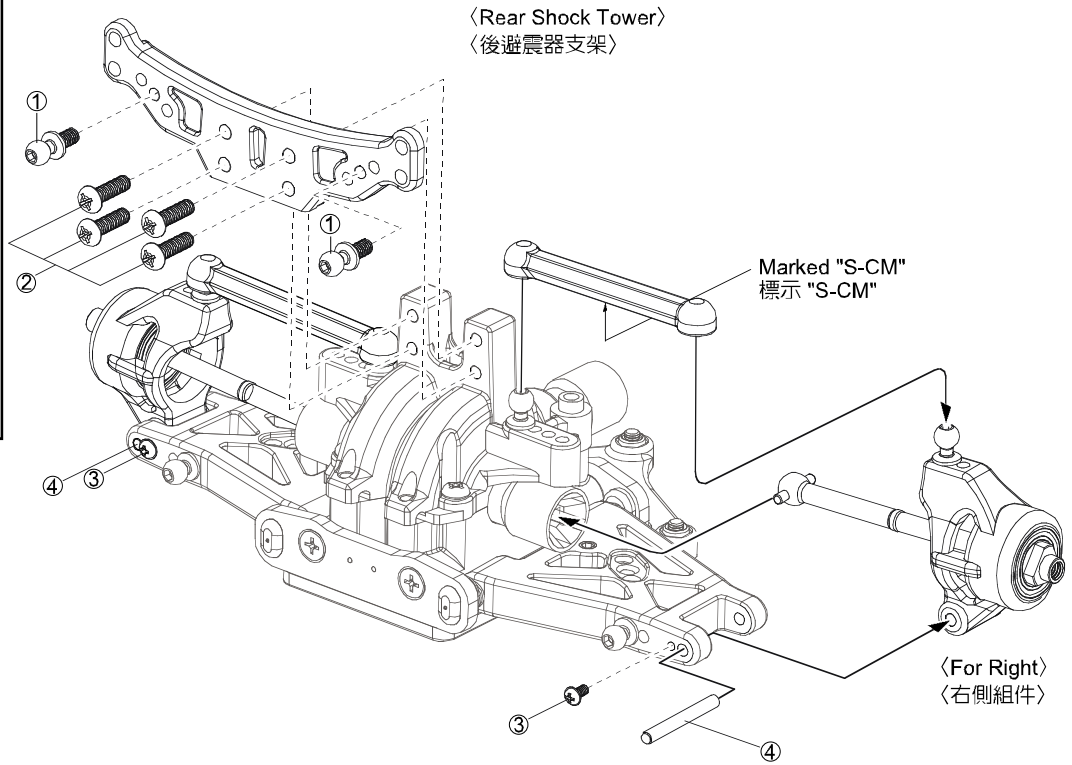

STEP6 Rear Suspension 後擺臂懸吊組


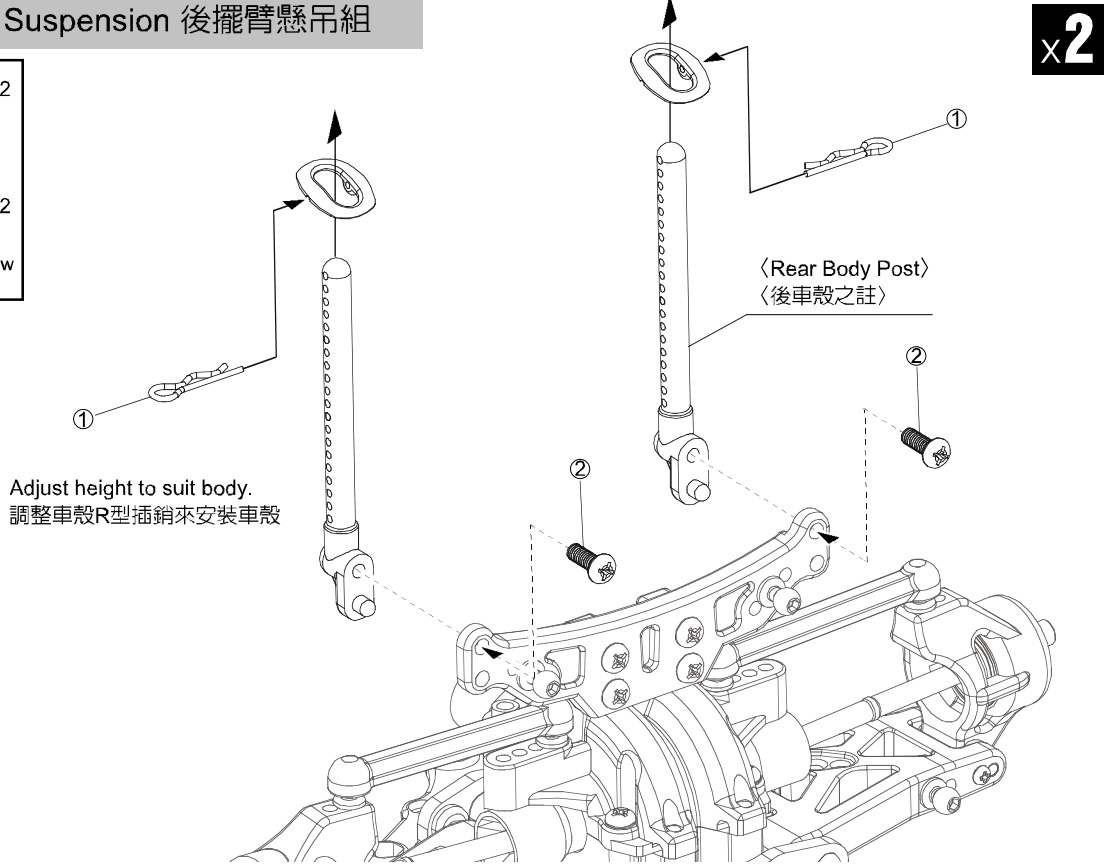


- ① Body Clip
車殼R型插銷
- ② 3x8mm BT Philip Machine Screw
圓頭十字螺絲




L/R Assemble left and right side the same way
左右側組件相同




 
 
x2 Assemble as many times as specified
依指示組裝所需數量


STEP 7 Shock Absorber 避震器組

-  ① Shock Shaft 避震器軸 4
-  ② 2.5mm E-Clips E字扣 8
-  ③ Shock Eyelet 避震軸球頭 4
-  ④ 2.8x1.9mm O-Ring O型環 2

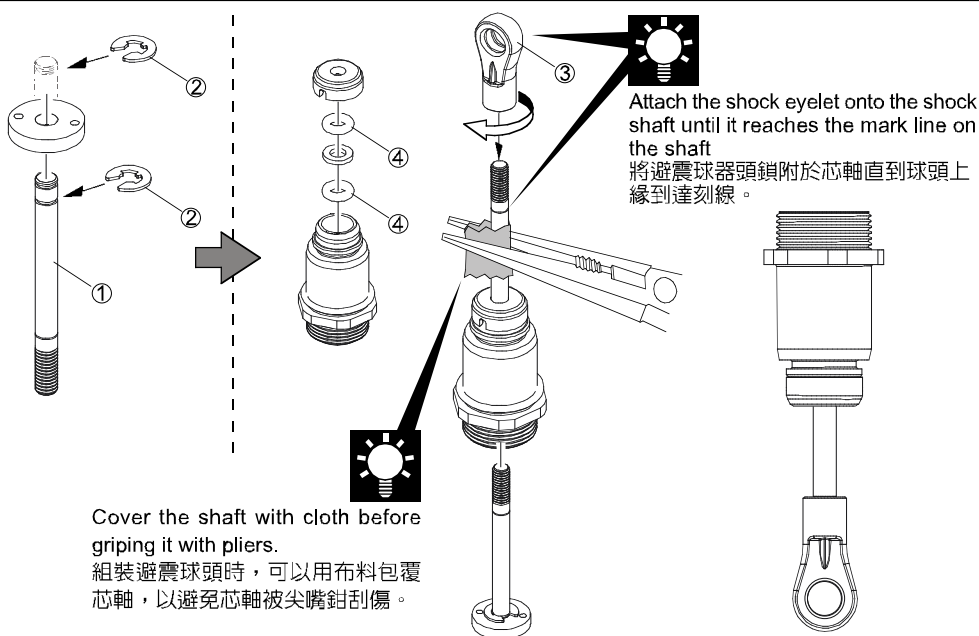


x4

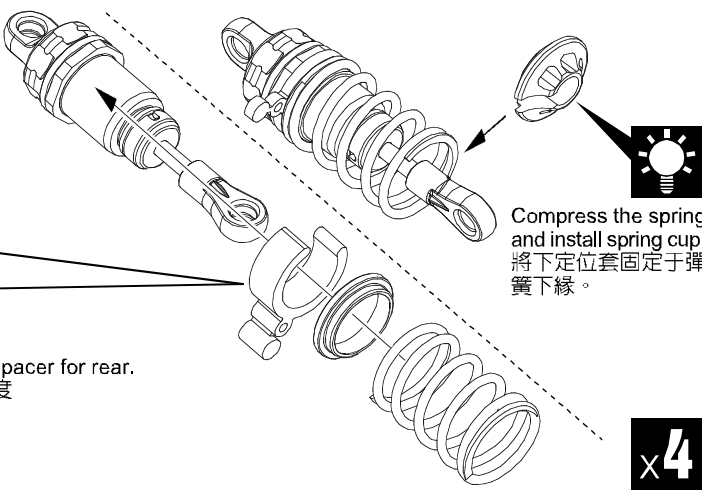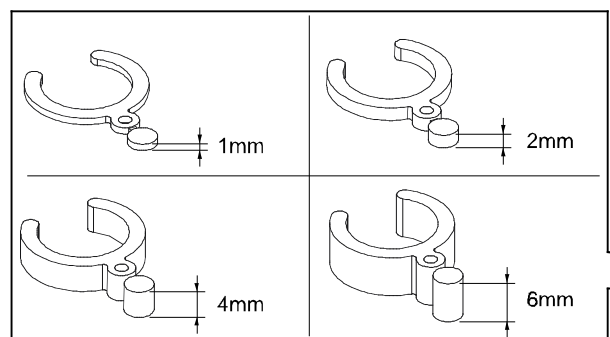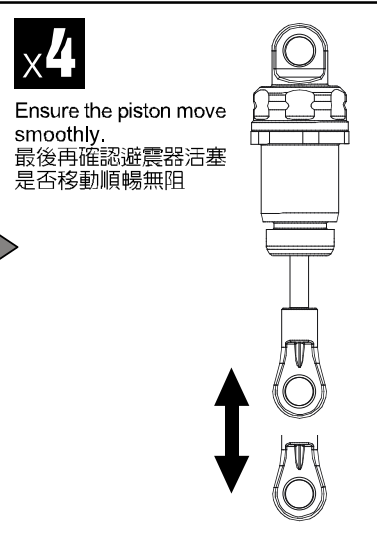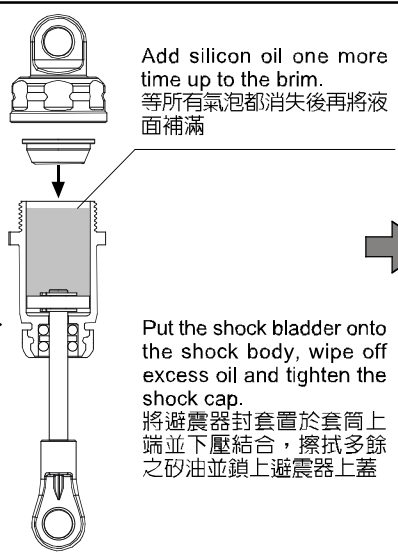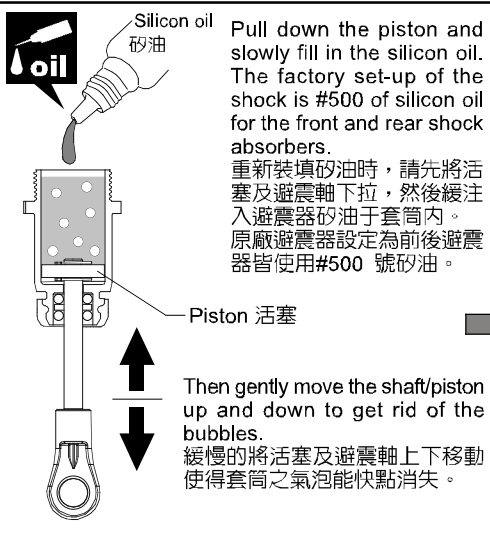

 Use 6 mm preload spacer for front. Use 6 mm preload spacer for rear.
使用6mm避震器套筒調整夾片來調整避震器彈簧之鬆緊度

x4


 Hint 組裝提示

 Apply silicon oil 使用模型專用矽油


x4 Assemble as many times as specified 依指示組裝所需數量

STEP7 Shock Absorber 避震器組

〈Front Shock Absroers〉
〈將前避震器與前擺臂懸吊結合〉


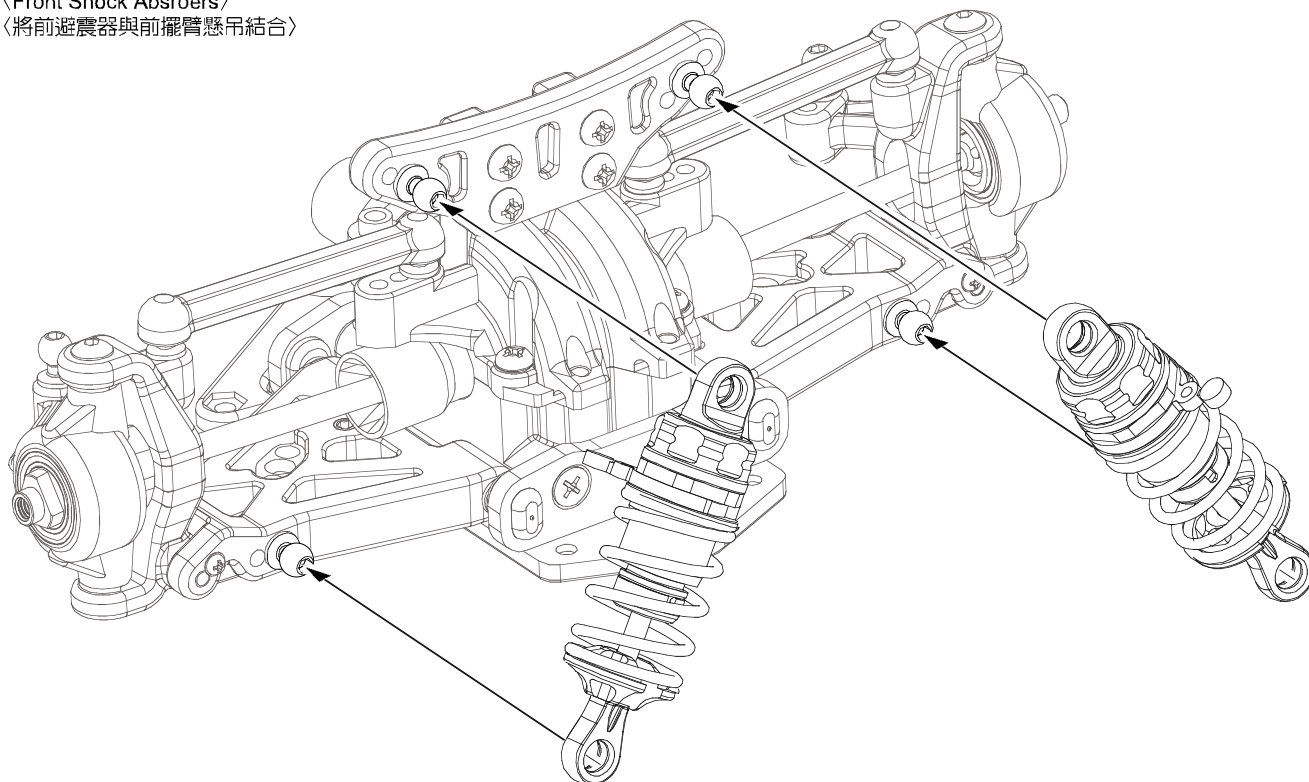


〈Rear Shock Absroers〉
〈將後避震器與後擺臂懸吊結合〉

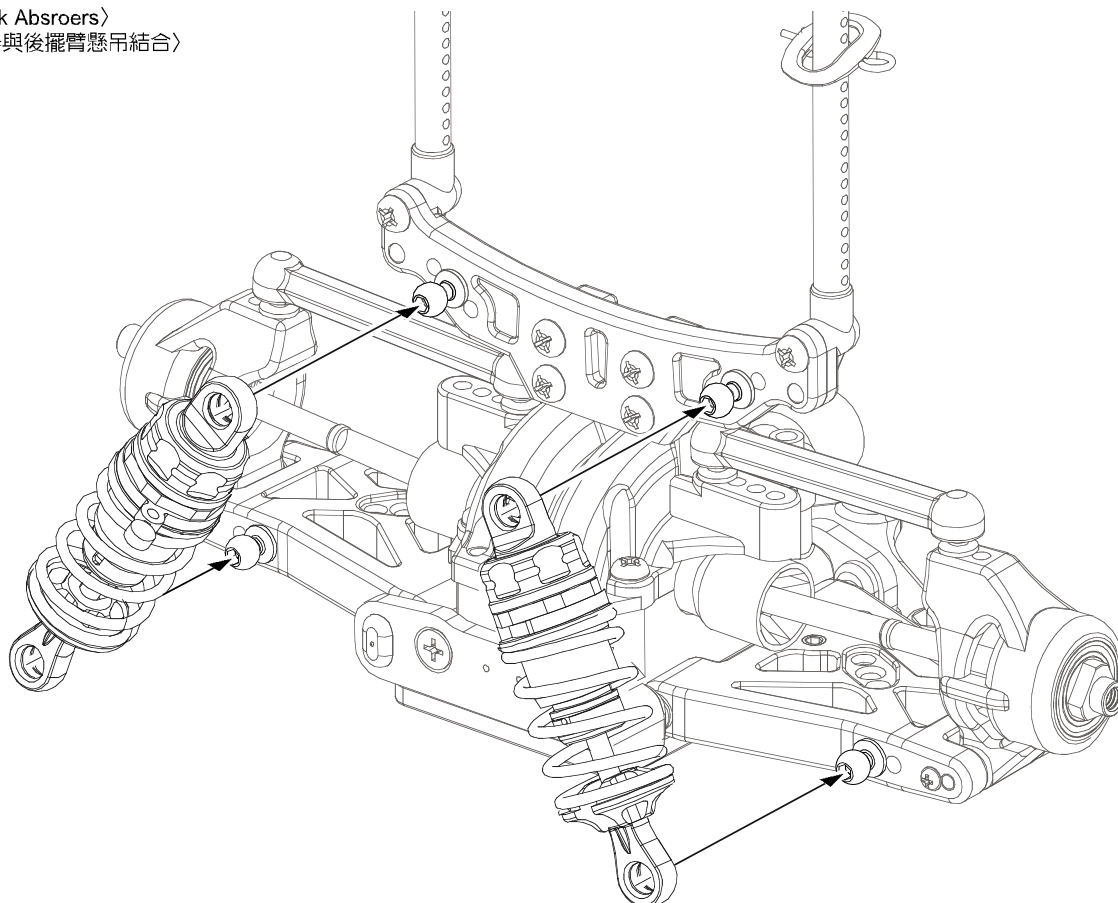

STEP8 Steering Bellcrank 轉向曲柄組

- ① 6mm(L) Ball Stud 球頭座
- ② Swing Post Screw 轉向曲柄固定螺絲
- ③ 5x8x2.5mm Ball Bearing 軸承

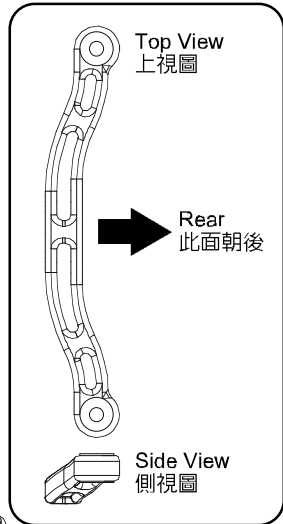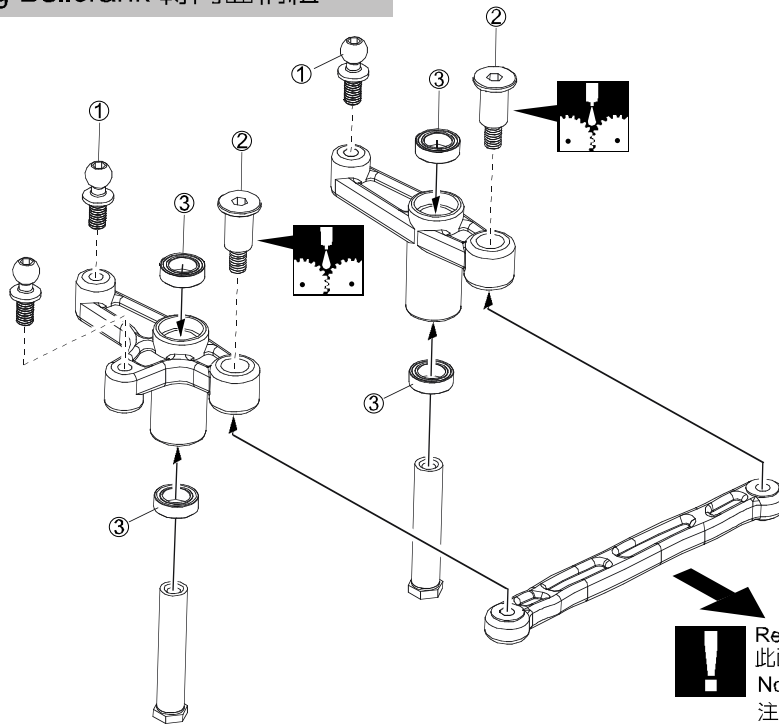

! Rear 此面朝後
Note direction 注意組裝方向


STEP8 Steering Bellcrank 轉向曲柄組

- ① 3x8mm BT Philip Machine Screw 圓頭十字螺絲
- ② 3x18mm BT Philip Machine Screw 圓頭十字螺絲

Front Chassis Brace 前補強板

Marked "S-ST" 標示 "S-ST"

Marked "S-ST" 標示 "S-ST"

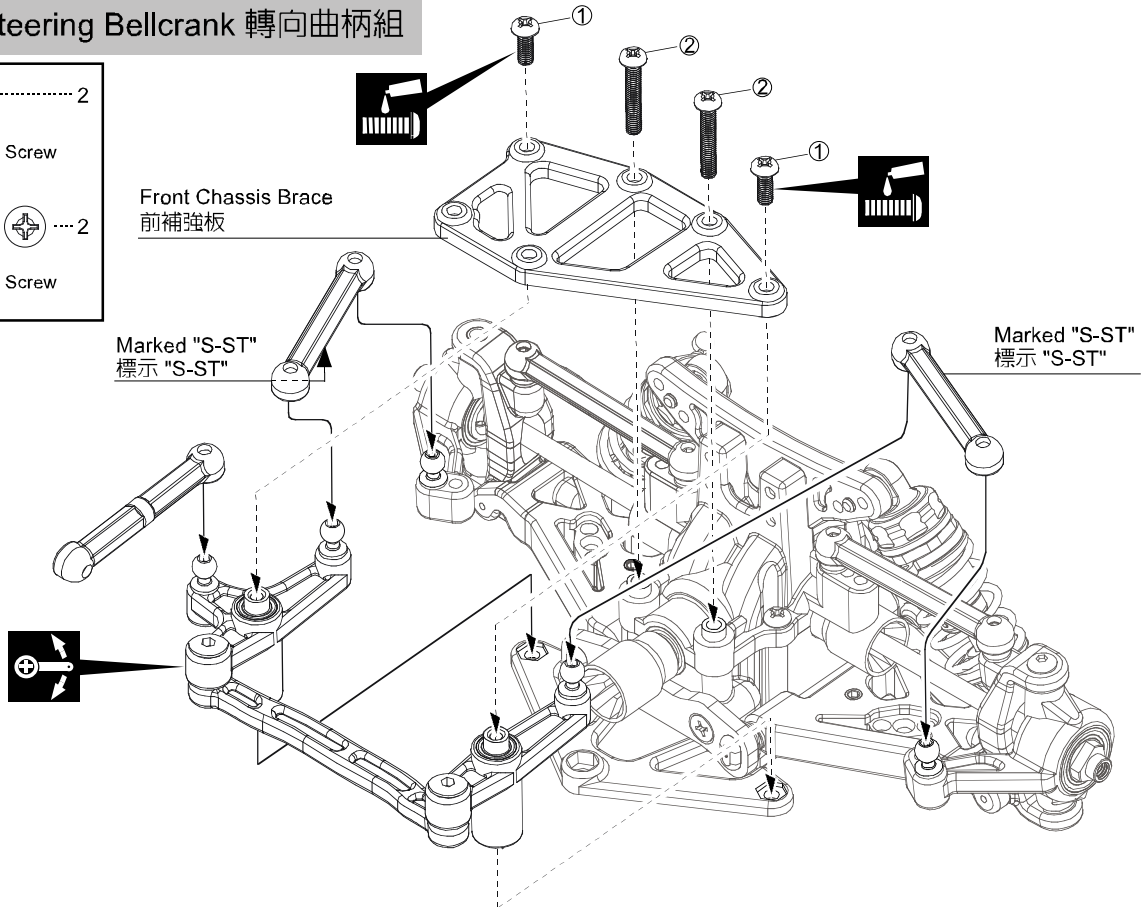

! Pay close attention here 注意組裝步驟



Ensure smooth, non-binding movement when assembling 確認組件靈活度

Apply threadlocker 使用螺絲防鬆膠

Apply grease 使用潤滑油膏(黃油)

STEP 9 Steering Servo 轉向伺服機 / Throttle/Brake Control Servo 油門/煞車伺服機

- ① 3x12mm F/H Self-Tapping Screw 平頭十字螺絲
- ② 3x10mm F/H Self-Tapping Screw 平頭十字螺絲
- ③ 6mm(S) Ball Stud 球頭座

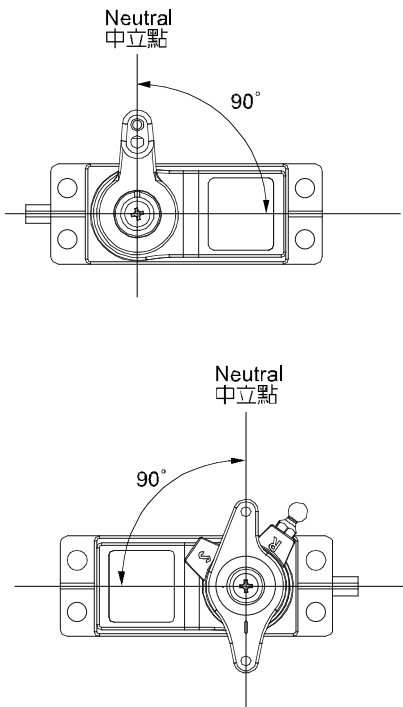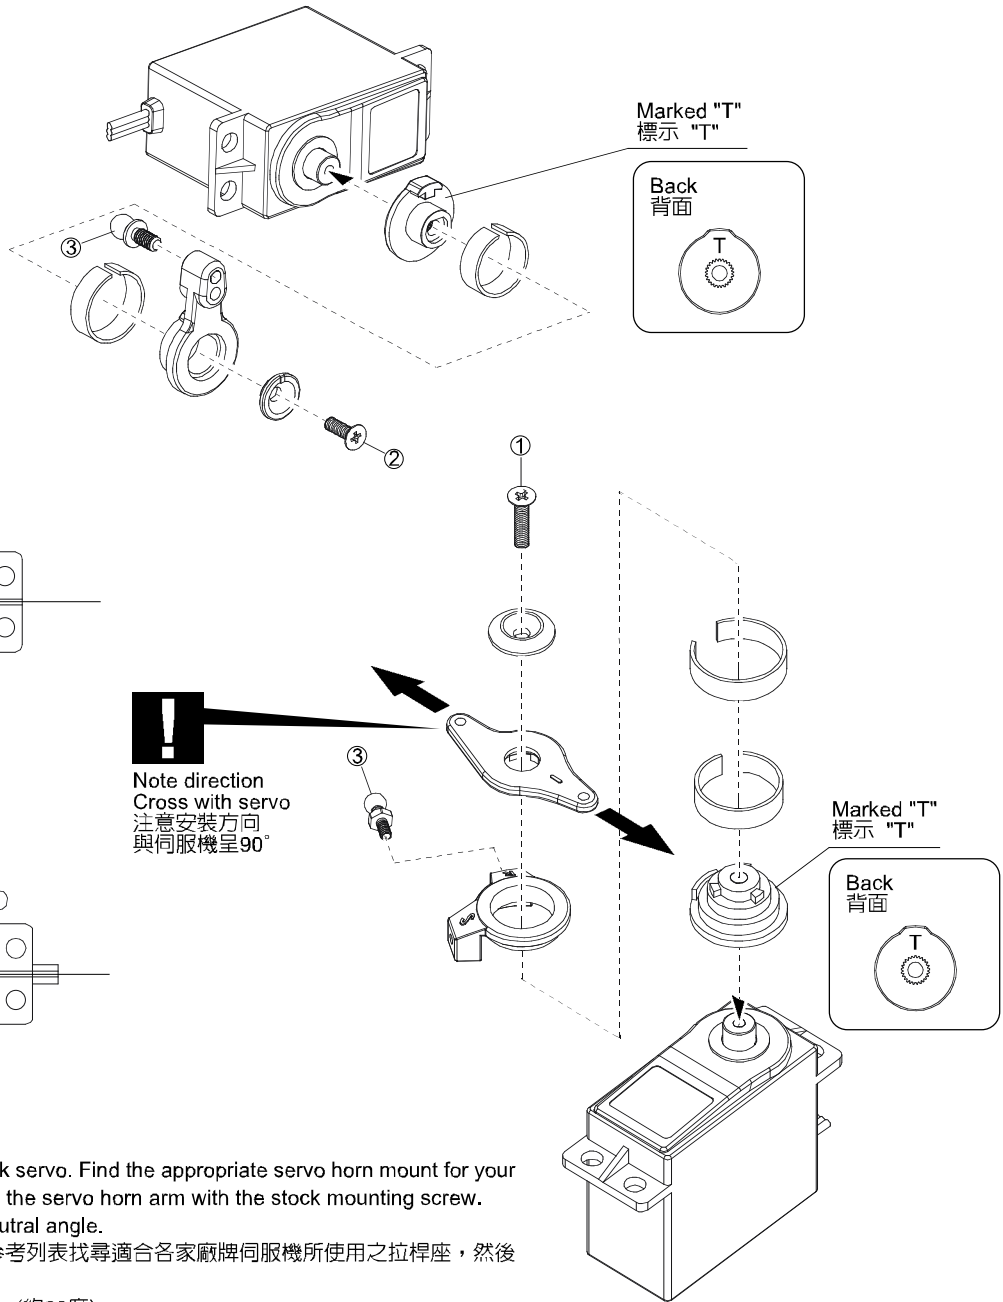


Marked "T" for Thunder Tiger stock servo. Find the appropriate servo horn mount for your servo from the chart below. Install the servo horn arm with the stock mounting screw. See the graphic for the correct neutral angle.
 標示"T"搭配原廠伺服機使用。請參考列表找尋適合各家廠牌伺服機所使用之拉桿座，然後配合拉桿鎖附於伺服機上。
 拉桿角度請依圖示調整於中立位置（約90度）。

Steering Servo Type 轉向伺服機	Servo Horn Mount 拉桿座	TH/BK Servo Type 油門/煞車伺服機	Servo Horn Mount 拉桿座
ACE R/C S1903/ S2008MG	T	Ace R/C S1903/ S2008MG	T
ACE R/C DS1015/DS1313	T	ACE R/C DS1015/DS0313	T
Airtronics / Sanwa	A	Airtronics / Sanwa	A
Futaba	T	Futaba	T
Hitec	H	Hitec	H

! Pay close attention here
 注意組裝步驟

STEP9 Steering Servo 轉向伺服機 / Throttle/Brake Control Servo 油門/煞車伺服機

- 
- ① 3x10mm
BT Philip Tap Screw W/ Washer
圓頭十字墊圈螺絲

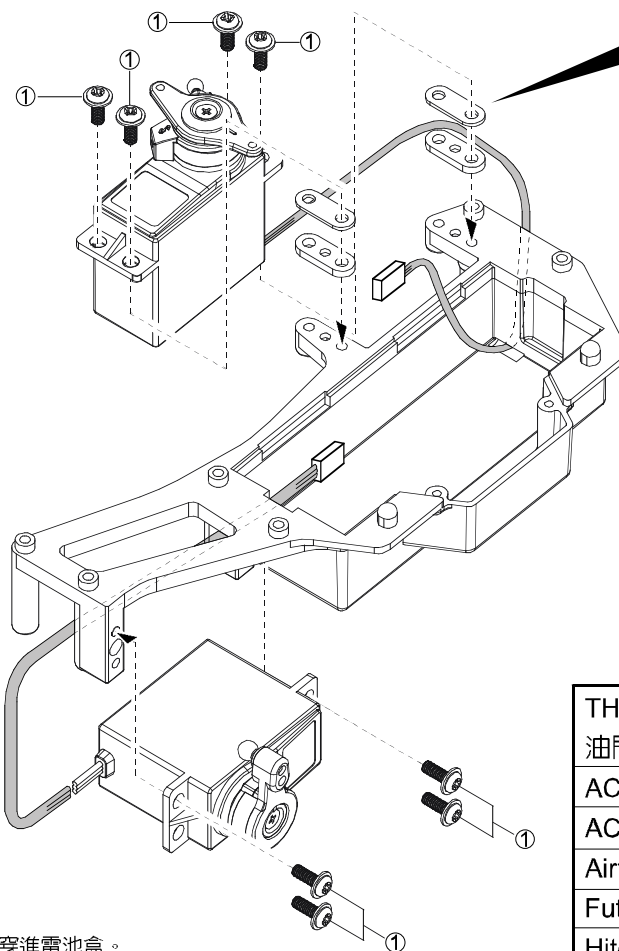



Note: !!!The use of the servo spacer may vary depending on the manufacturer's stock servo you purchased. Check the servo to see if a spacer is needed.


注意!!! 由於市售伺服機規格不一，伺服機的安裝調整請依各家廠牌伺服機實際安裝情況為準來使用調整墊片。

Thread servo cord through.
將伺服機連接線/插頭依圖示穿進電池盒。

TH / BK 油門 / 煞車伺服機	Spacer 調整墊片
ACE R/C S1903/ S2008MG	thin
ACE R/C DS1015/DS1313	thick + thin
Airtronics / Sanwa	See Note:
Futaba	See Note:
Hitec	See Note:

 STEP10 Radio Box 電池盒

- 
- ① 2.5x5mm
F/H Philip Machine Screw
平頭十字螺絲
- 
- ② 2x12mm
BT Philip Machine Screw
圓頭十字螺絲

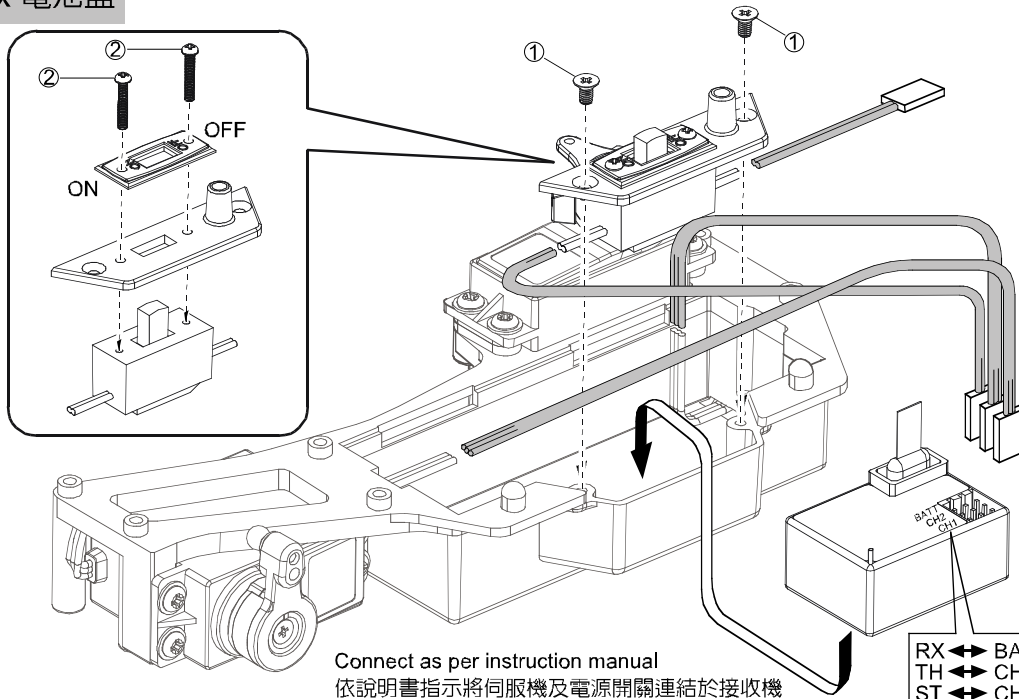


Connect as per instruction manual
依說明書指示將伺服機及電源開關連結於接收機


RX ↔ BATT
TH ↔ CH2
ST ↔ CH1



STEP10 Radio Box 電池盒

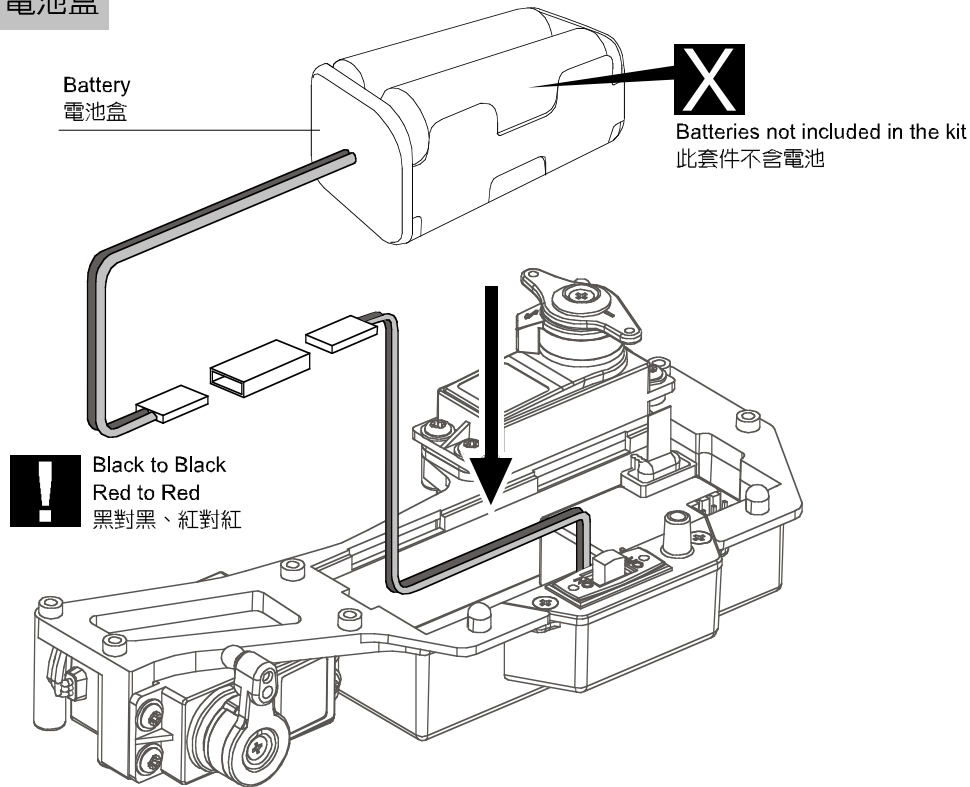

STEP10 Radio Box 電池盒

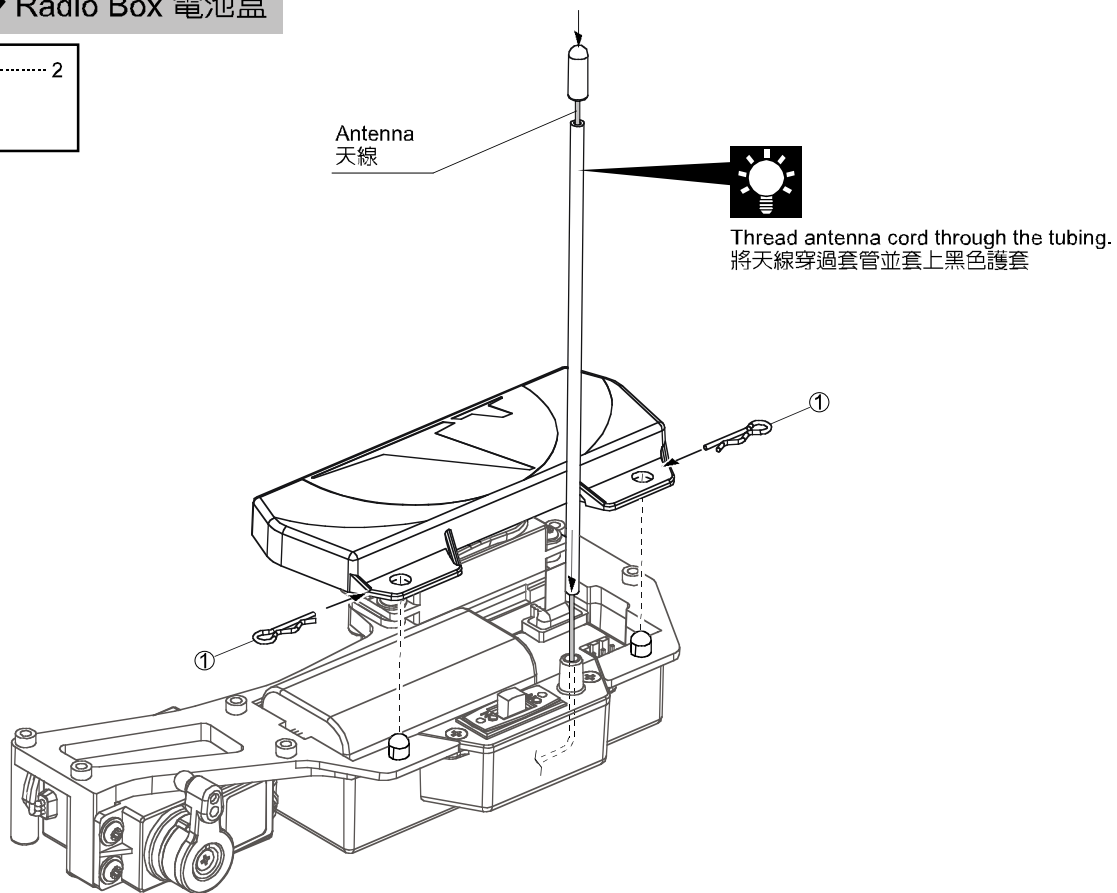

X Must be purchased separately
改裝品需另購


! Pay close attention here
注意組裝步驟

 Hint
組裝提示

STEP11 Installation of Rear End 結合後擺臂懸吊組

- | | | |
|--|--|---------|
| | | 3 |
| ① M3 Lock Nut
止鬆螺帽 | | |
| | | 3 |
| ② 3x10mm
F/H Philip Machine Screw
平頭十字螺絲 | | |


〈Rear Suspension〉
〈將後擺臂懸吊組結合於底板上〉

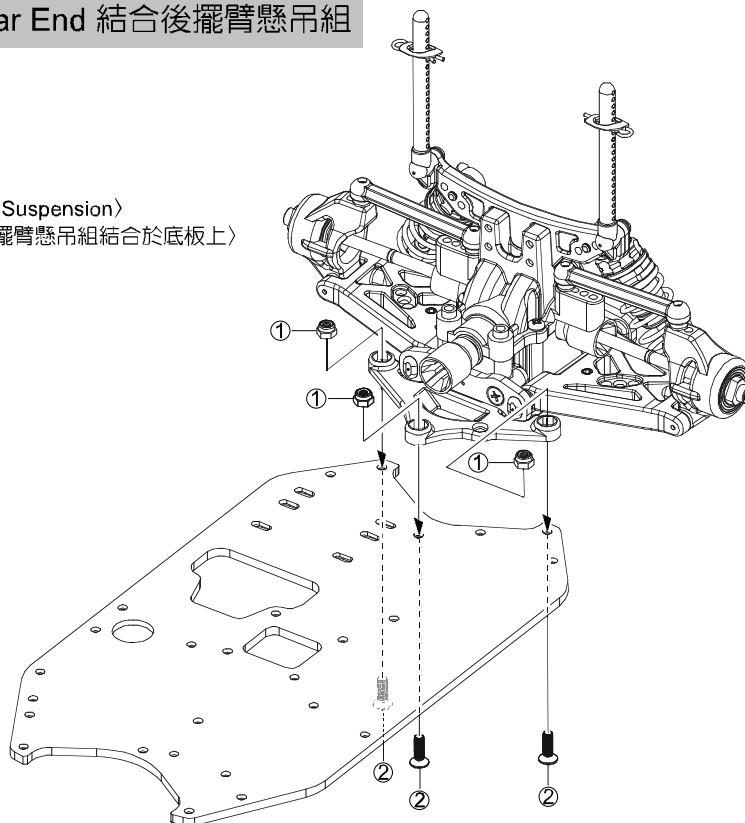

STEP12 Installation of Radio Box 結合電池盒

- | | | |
|--|--|---------|
| | | 6 |
| ① 3x10mm
F/H Philip Machine Screw
平頭十字螺絲 | | |

〈Radio & Servo Tray Unit〉
〈將電池盒結合於底板上〉

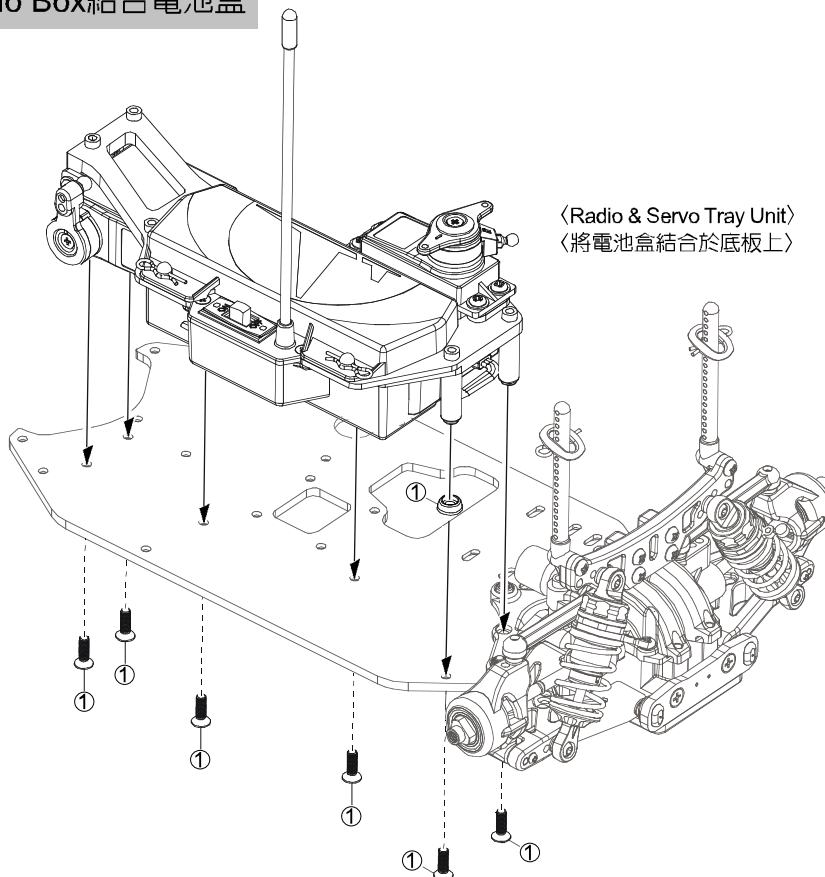

STEP12 Installation of Rear Brace 結合後補強版




① 3x8mm
BT Philip Machine Screw
圓頭十字螺絲



② 3x18mm
BT Philip Machine Screw
圓頭十字螺絲

〈Rear Chassis Brace〉
〈將後補強版結合於後懸吊組與電池盒上〉

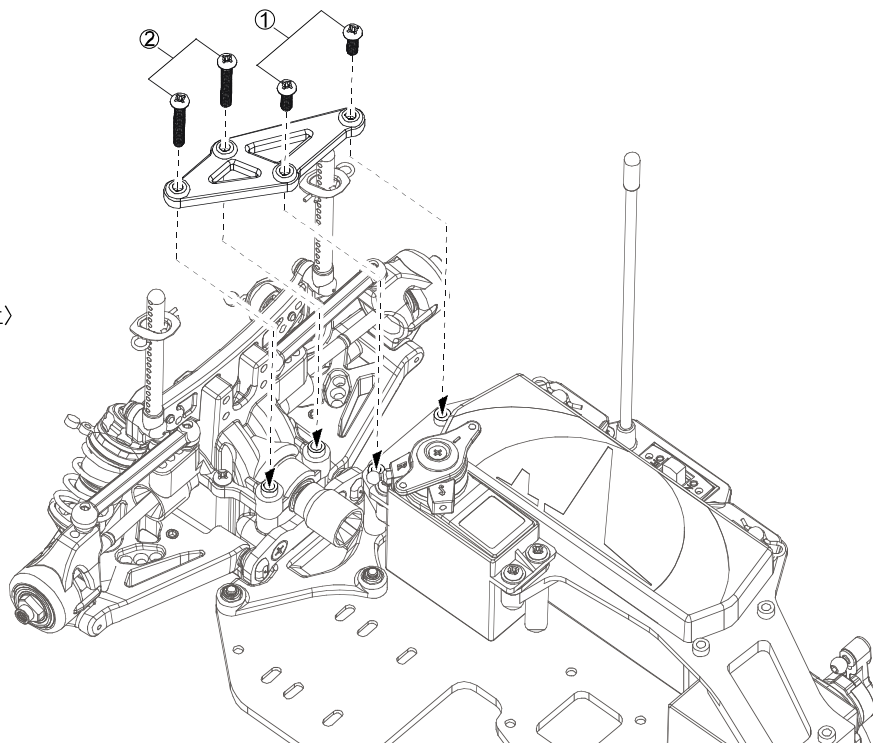

STEP13 Installation of Front End 結合前擺臂懸吊組

〈Front Suspension〉
〈將前擺臂懸吊組結合於底板上〉



① 3x8mm
BT Philip Machine Screw
圓頭十字螺絲




② 3x10mm
F/H Philip Machine Screw
平頭十字螺絲



③ 3x12mm
F/H Philip Machine Screw
平頭十字螺絲




④ M3 Lock Nut
止鬆螺帽

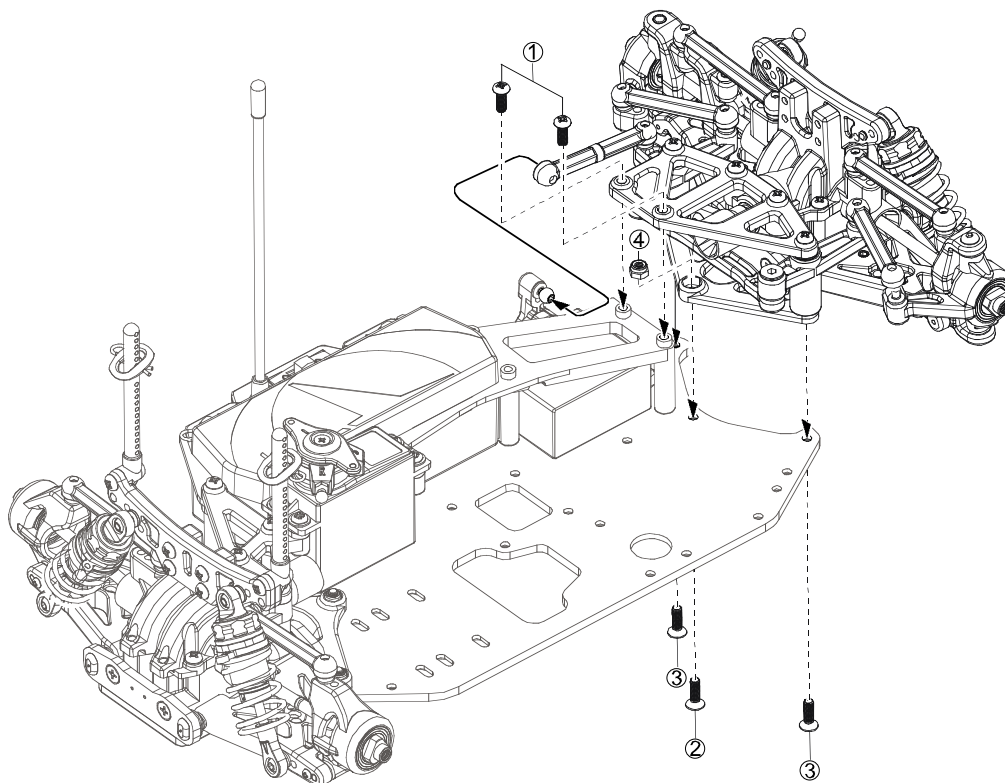



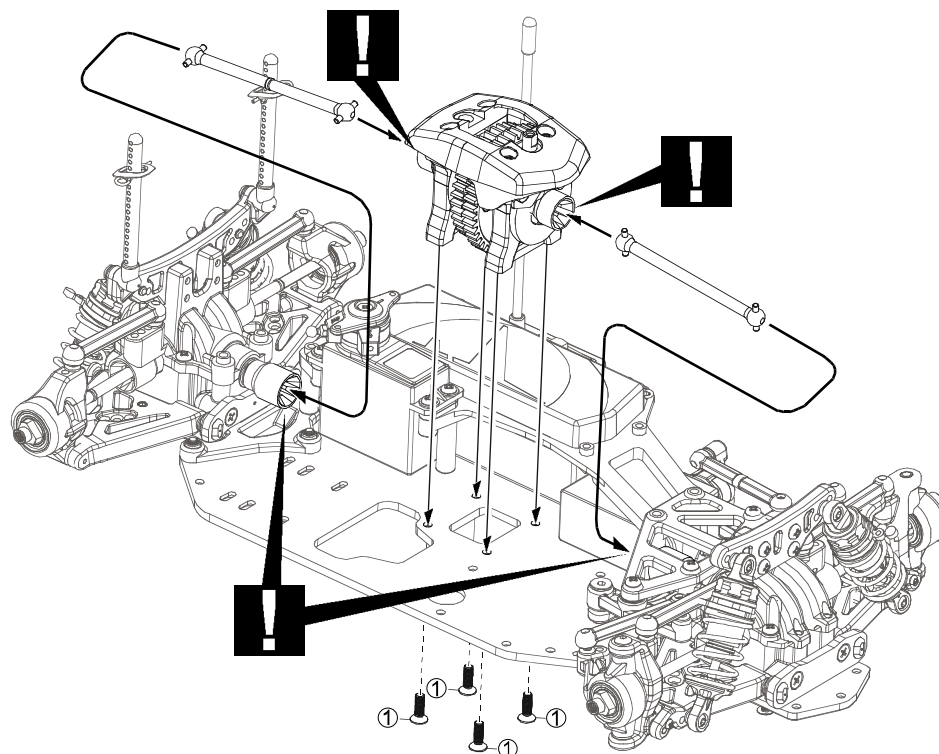


STEP14 Installation of 2-Speed Transmission Unit 結合2段變速組


- 
 2
 ① 3x10mm
 F/H Philip Machine Screw
 平頭十字螺絲



Check O-ring Inside
 請先確認內部O型環已置入

STEP15 Installation of Fuel Tank 結合油箱

- 
 3
 ① 3x10mm
 F/H Philip Machine Screw
 平頭十字螺絲
-  3
 ② 2.9x1.8mm
 O-Ring
 O型環
- 
 1
 ③ 3x6mm
 BT Philip Machine Screw
 圓頭十字螺絲

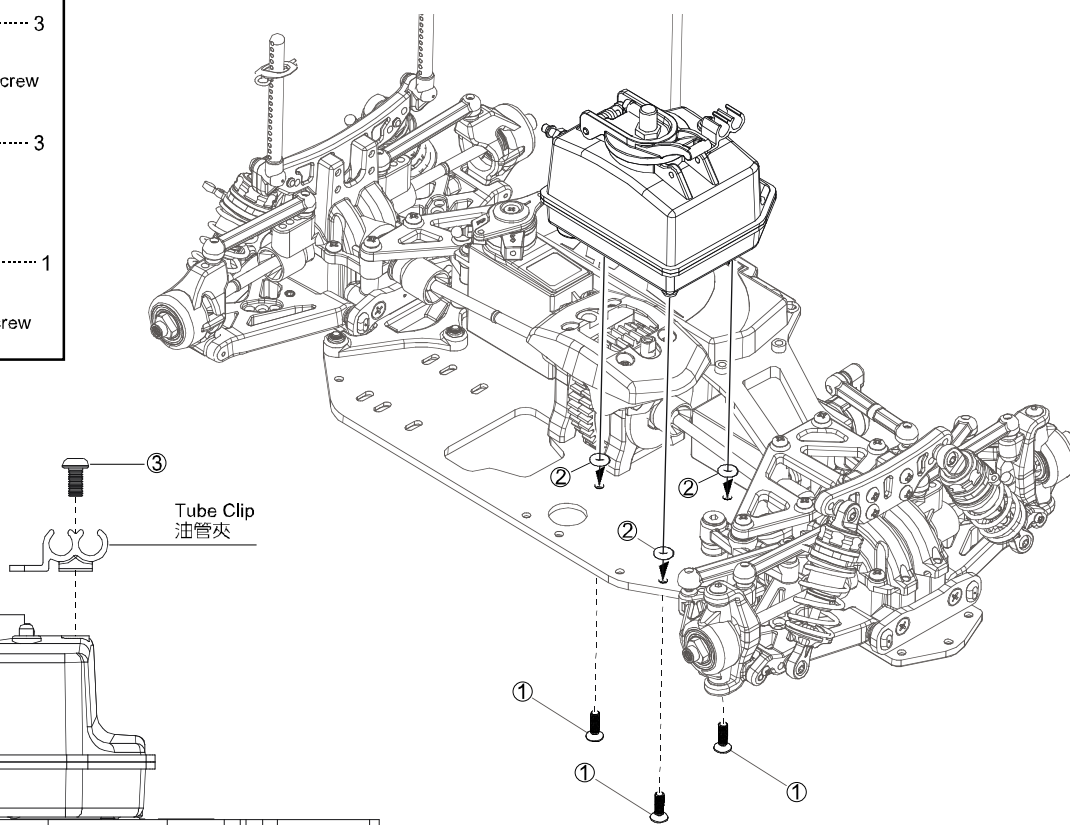

Pay close attention here
 注意組裝步驟

STEP16 Engine Set 引擎與離合器罩

① 5x8x2.5mm
Ball Bearing
軸承

② 5x10x4mm
Ball Bearing
軸承

③ 3mm
Washer
墊圈


④ 3x6mm
Socket Hex Machine Screw
內六角固定螺絲

⑤ 3x10mm
Socket Hex Machine Screw
內六角固定螺絲

⑥ 3mm
Spring Washer
彈簧墊圈

⑦ 5x8mm
Washer
鋼迫緊板


⑧ 3x28mm
Socket Hex Machine Screw
內六角固定螺絲

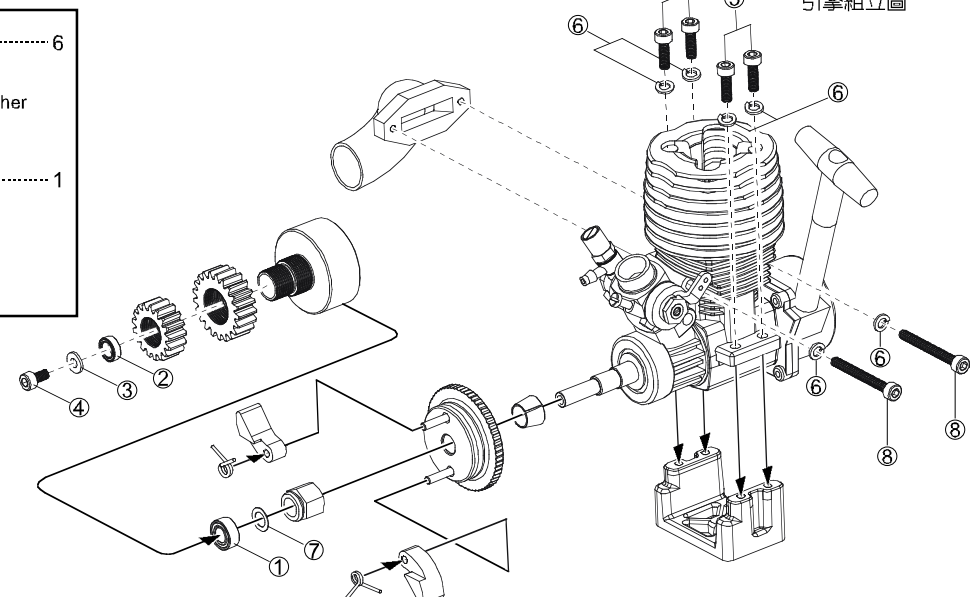


Engine Assembly
引擎組立圖

STEP16 Installation of Engine Set 引擎安裝

① 3x12mm
BT Machine Screw
圓頭十字螺絲

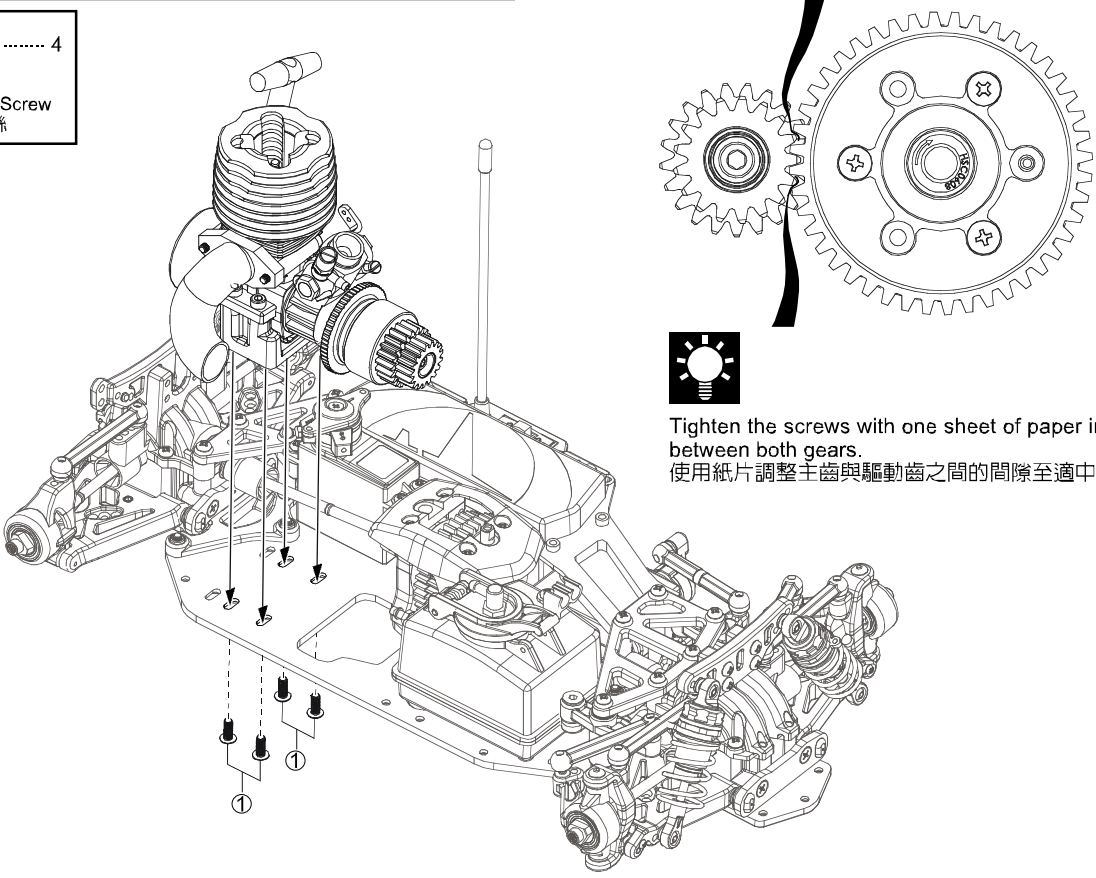



Tighten the screws with one sheet of paper inserted between both gears.
使用紙片調整主齒與驅動齒之間間隙至適中位置。

 Hint
組裝提示


STEP17 Muttler & Fuel Tube 消音器與油管

Fuel Tube & Tuned Pipe

- ① 3x10mm
F/H Philip Machine Screw
平頭十字螺絲
- ② M3 Lock Nut
止鬆螺帽







Cut the silicone tube to 265mm length for the fuel tube.
將油管裁切成265mm之長度做為輸油管
Cut the silicone tube to 195mm length for the pressure tube.
將油管裁切成195mm之長度做為回壓管
Pass tube through tube clip. Squeeze the end of pressure tube into the hole in the tuned pipe about 10mm.
將油管固定於油管夾上並將回壓管塞入排氣管回壓接孔內約10mm後固定

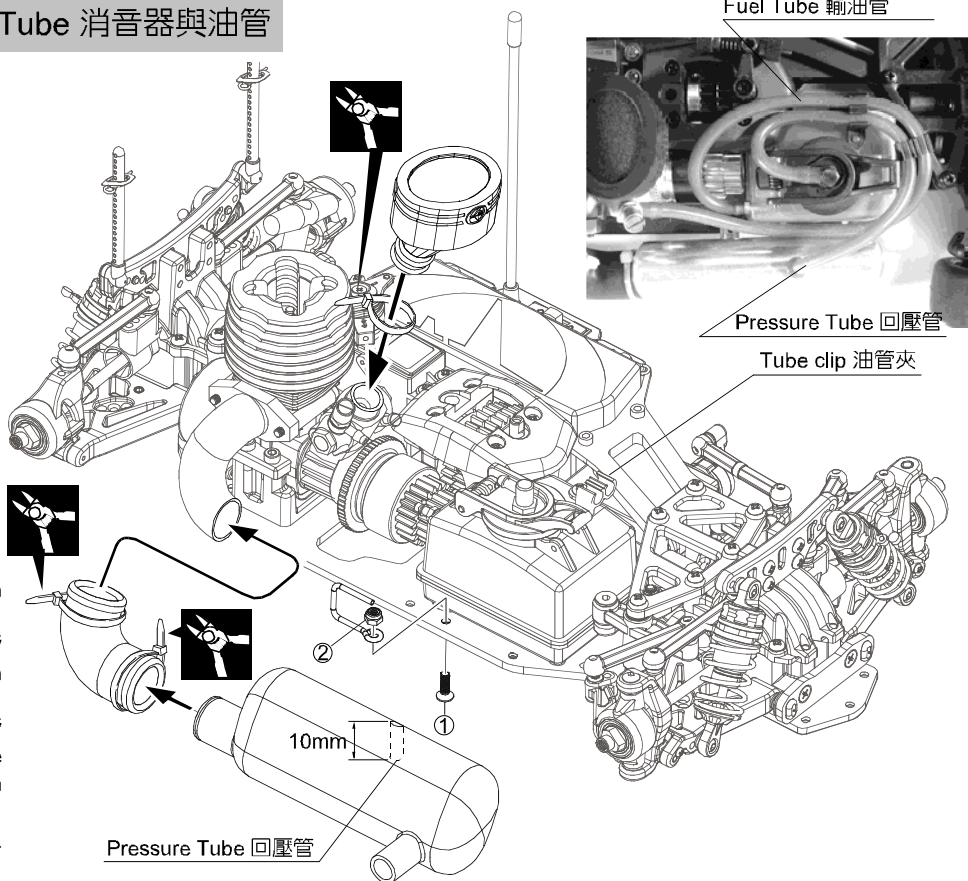

STEP18 Throttle/Brake Linkage 伺服機油門/煞車連桿

- ① 3x6mm
BT Philip Machine Screw
圓頭十字螺絲

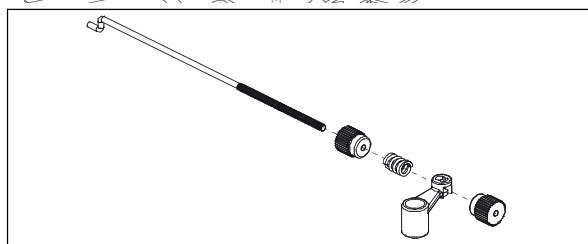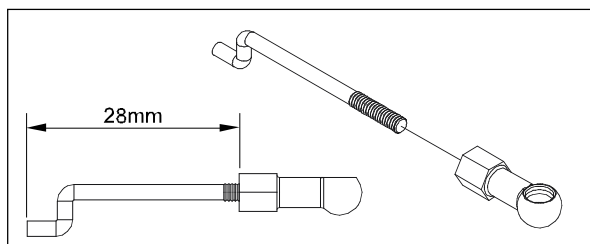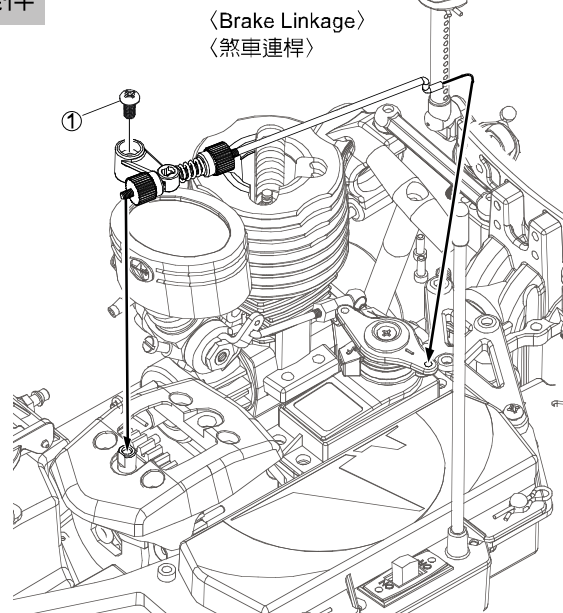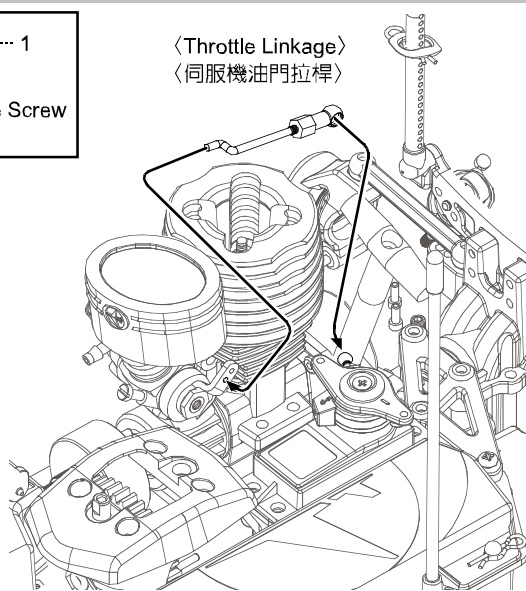



Cut off excess
裁剪多餘部分

Hint
組裝提示






STEP19 Front Bumper 前防撞板 / Front Body Mounts 前車殼支柱

Adjust height to suit body.
調整車殼R型插銷來安裝車殼

- ① 3x10mm
F/H Philip Machine Screw
平頭十字螺絲 3
- ② Body Clip
車殼R型插銷 2
- ③ 3x8mm
F/H Philip Machine Screw
平頭十字螺絲 5

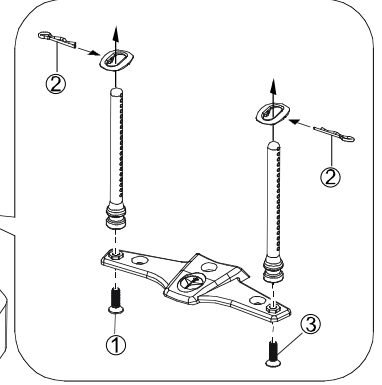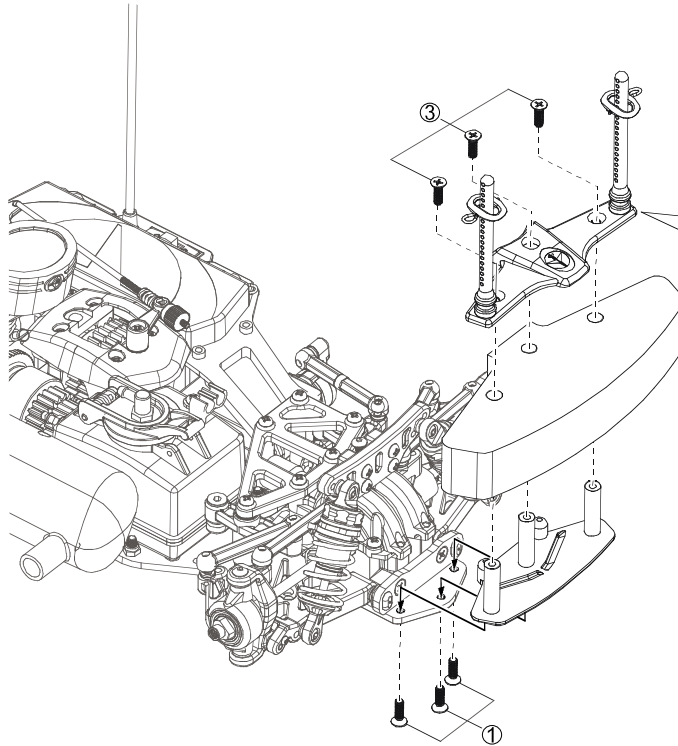


STEP20 Tire/Wheels 輪胎及輪轂

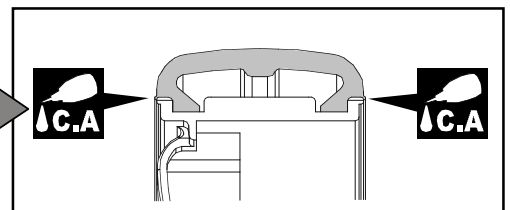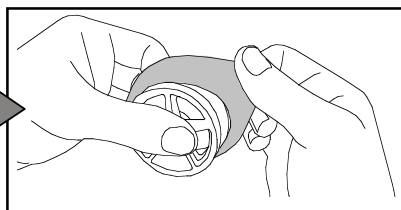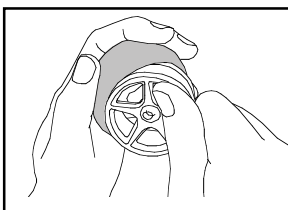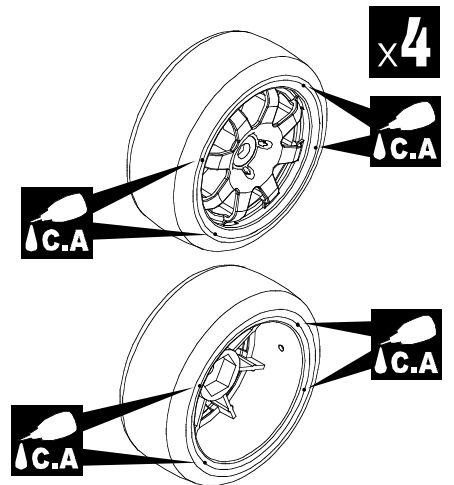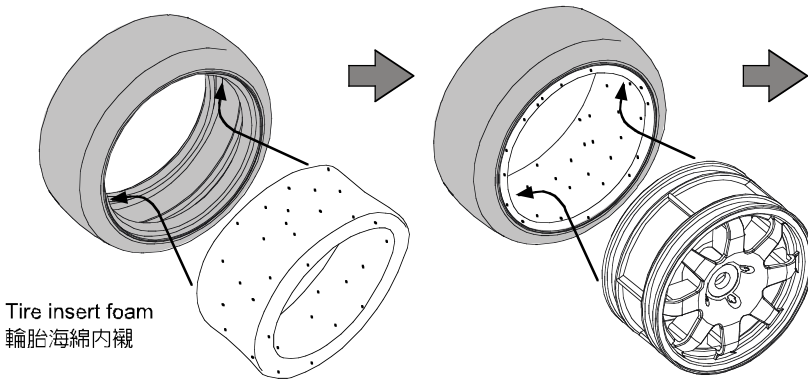



 Install the tire onto the wheel. Glue the tire to the wheel with instant glue in four spots around the tire on both sides.
將輪胎(含內襯)與輪轂結合並在胎緣內側點上快乾膠黏合。


Warning: Follow the adhesive instructions for proper use and safety. Wear eye and hand protection.
注意!!! 使用快乾膠時請注意安全, 最好戴上手套及護目鏡以避免危險。



STEP20 Tire/Wheels 輪胎及輪轂




-  4
① 4x12mm
Socket Hex Machine Screw
內六角固定螺絲
-  4
② 4mm
Washer
墊圈

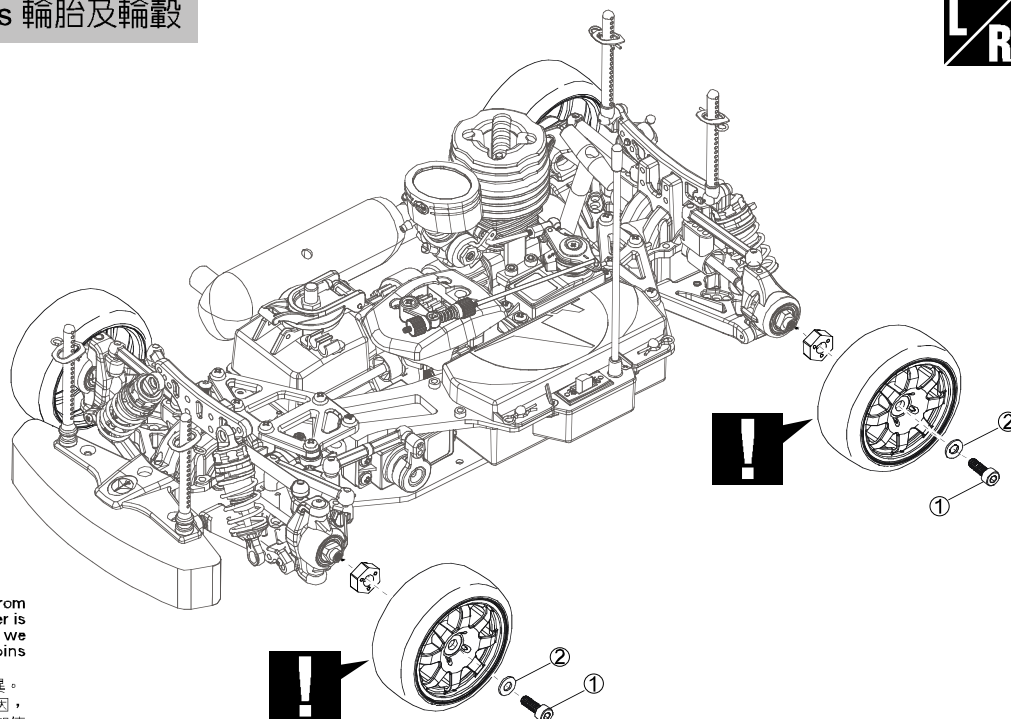

!
The tires and wheels in your kit may vary from those shown in the pictures. Thunder Tiger is constantly working to upgrade our kits and we reserve the right to change specifications without prior notice.
本套件所附之輪胎與輪轂可能跟圖示有所差異。因產品後續之設計研發或功能不斷改善之原因，我們將保留產品規格變更權利，不再另行通知使用者。

STEP21 Body Shell 車殼

-  4
① Body Clip
車殼R型插銷
-  2
② Round Tap Screw
圓頭十字螺絲

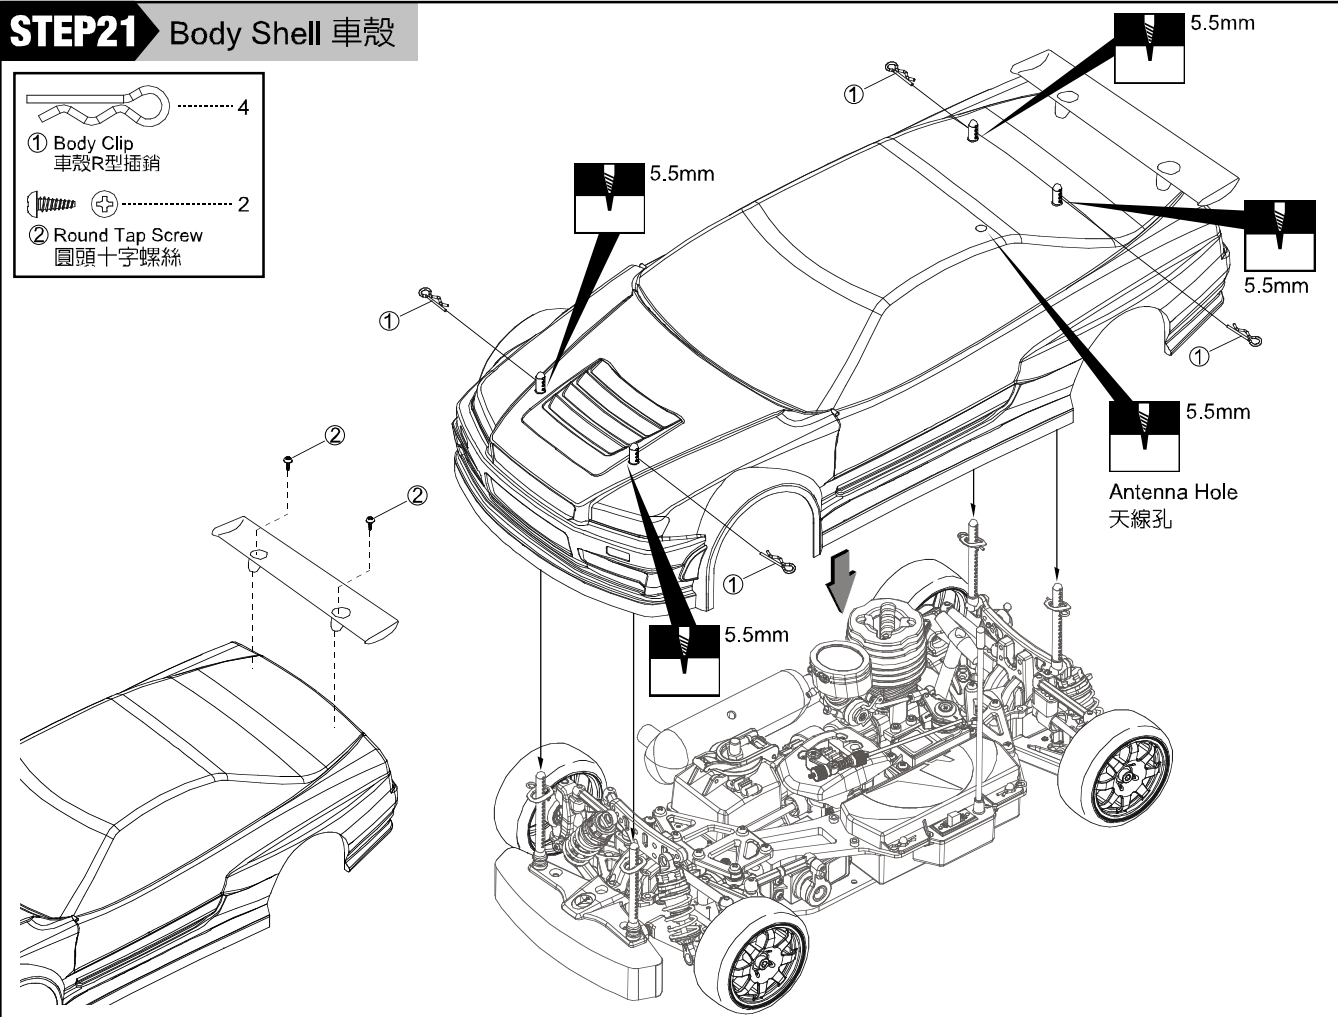


! Pay close attention here
注意組裝步驟


LR Assemble left and right side the same way
左右側組件相同

! Drill holes with the specified diameter
依標示尺寸鑽孔


FRONT ASSEMBLY

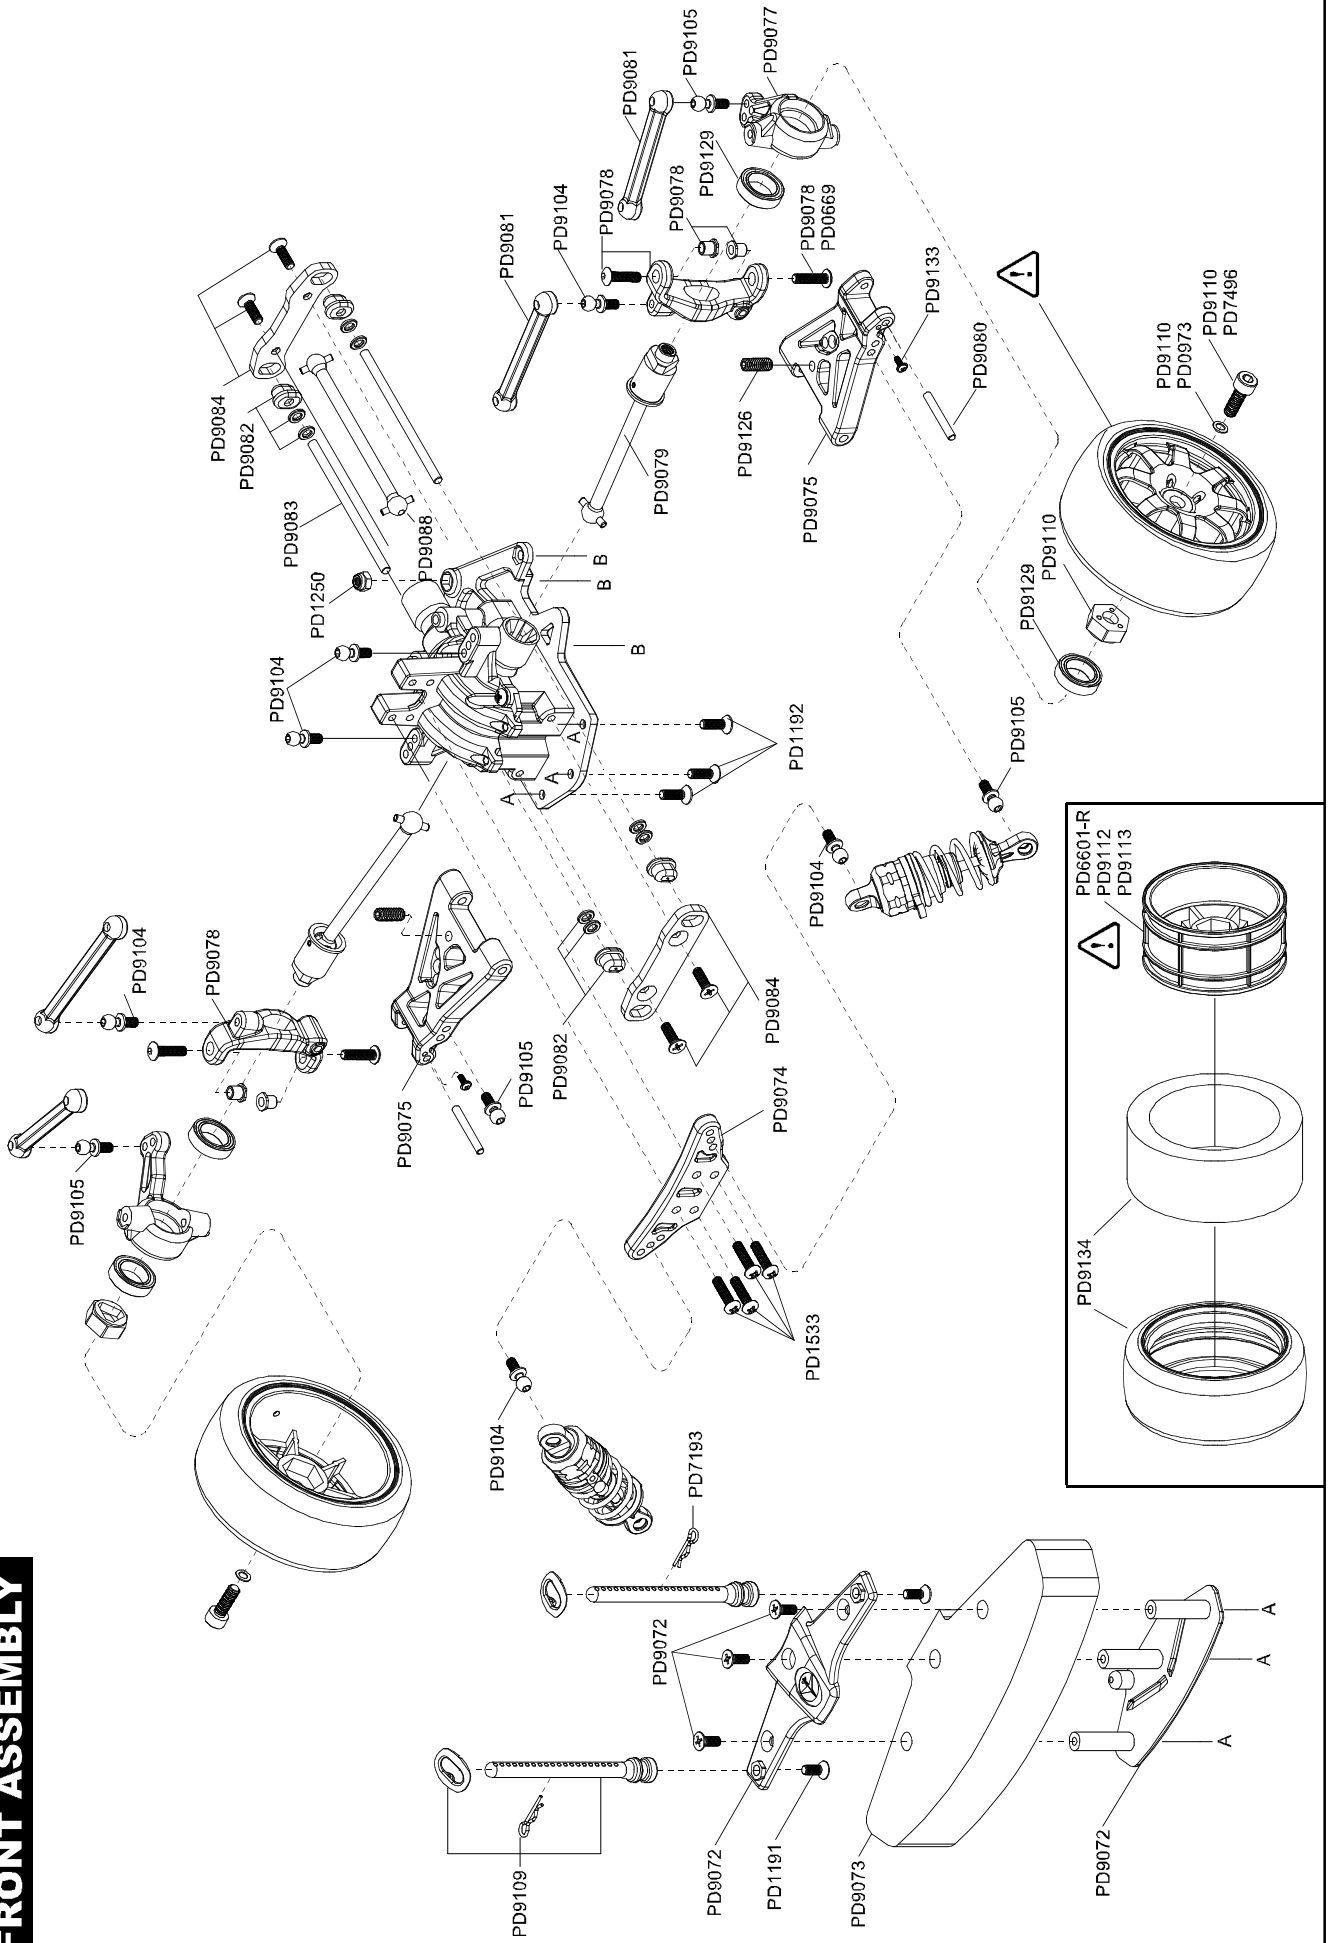


CHASSIS ASSEMBLY

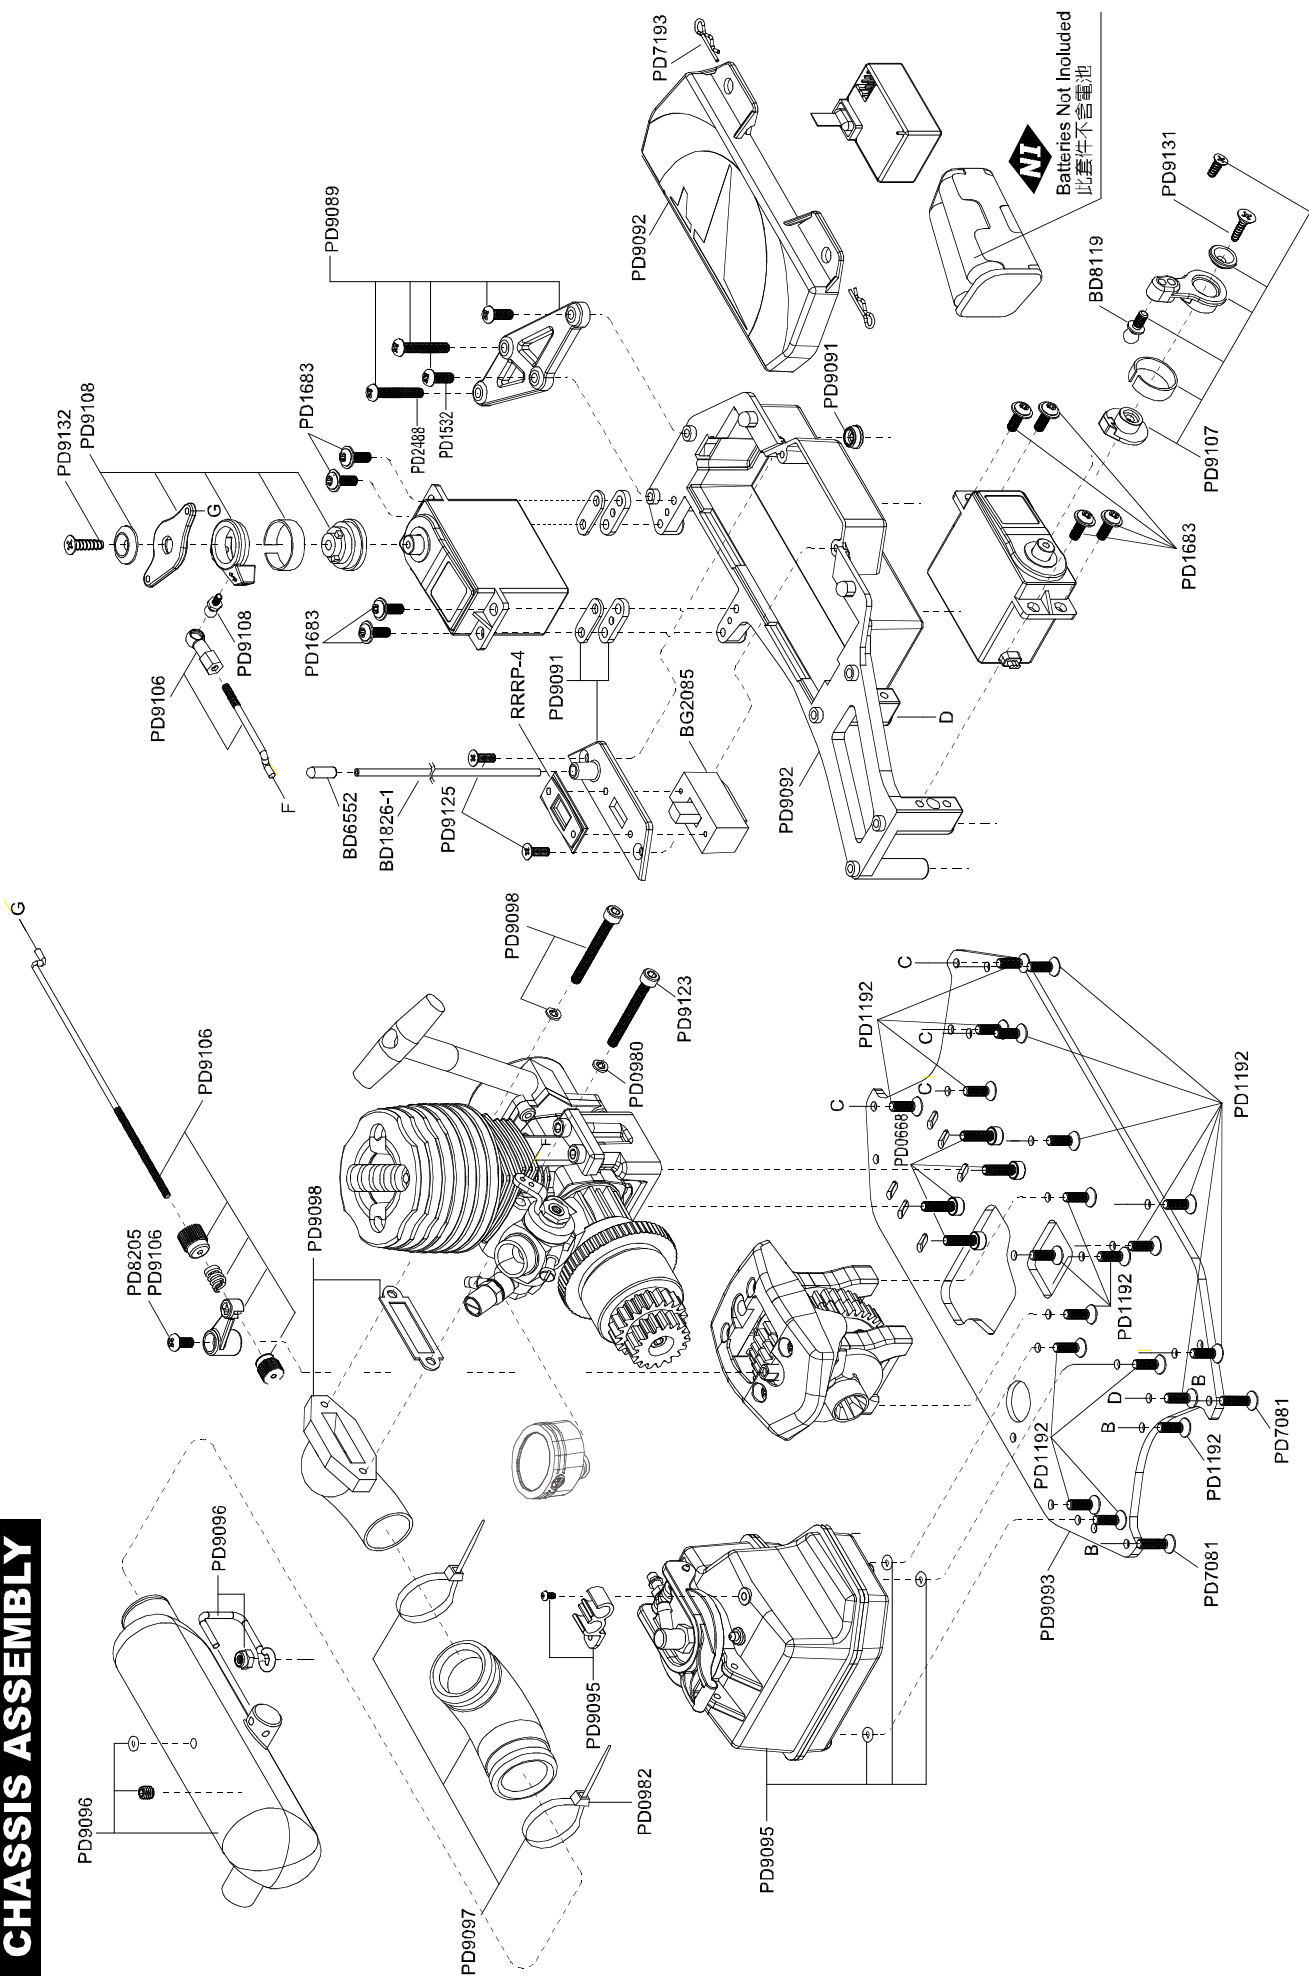


SHOCK ASSEMBLY

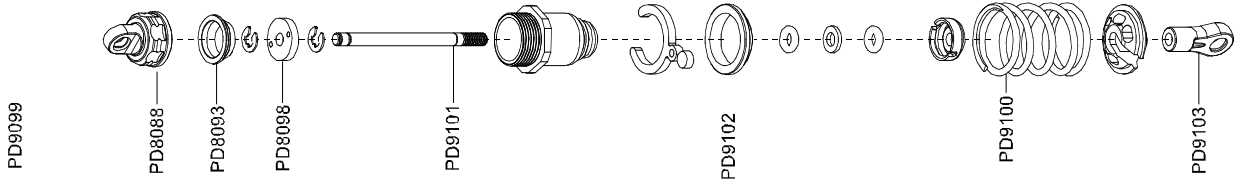


2 SPEED ASSEMBLY

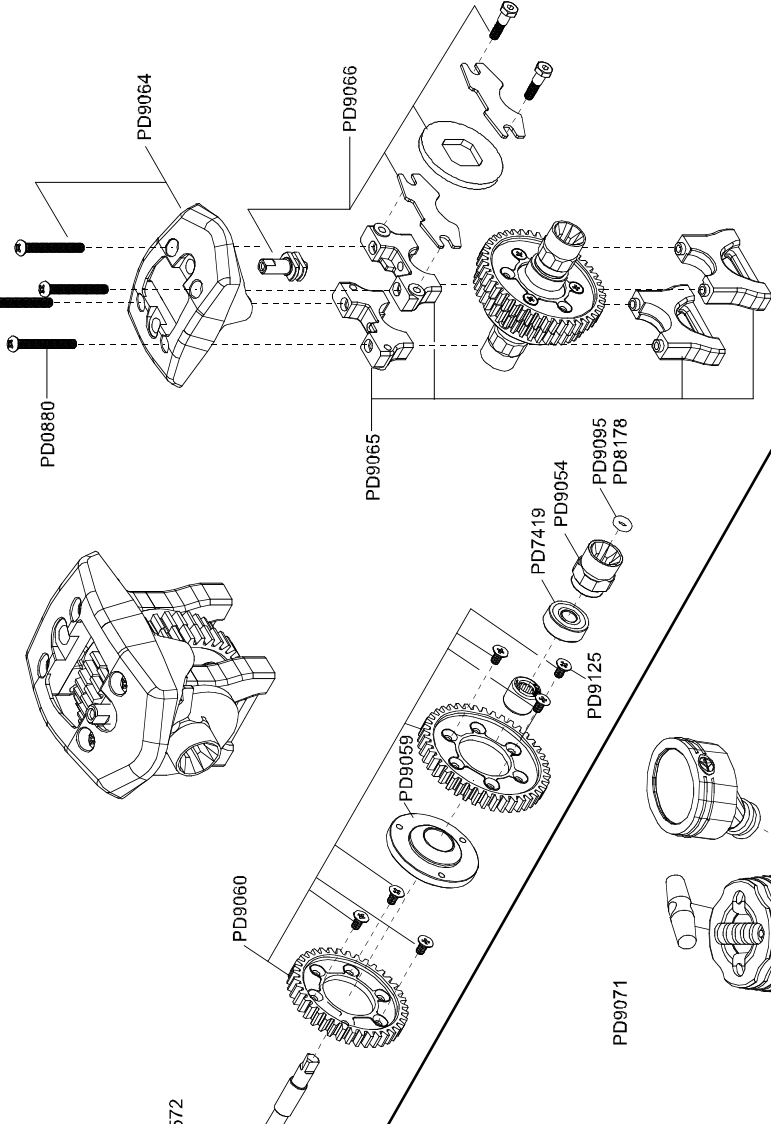


ENGINE ASSEMBLY

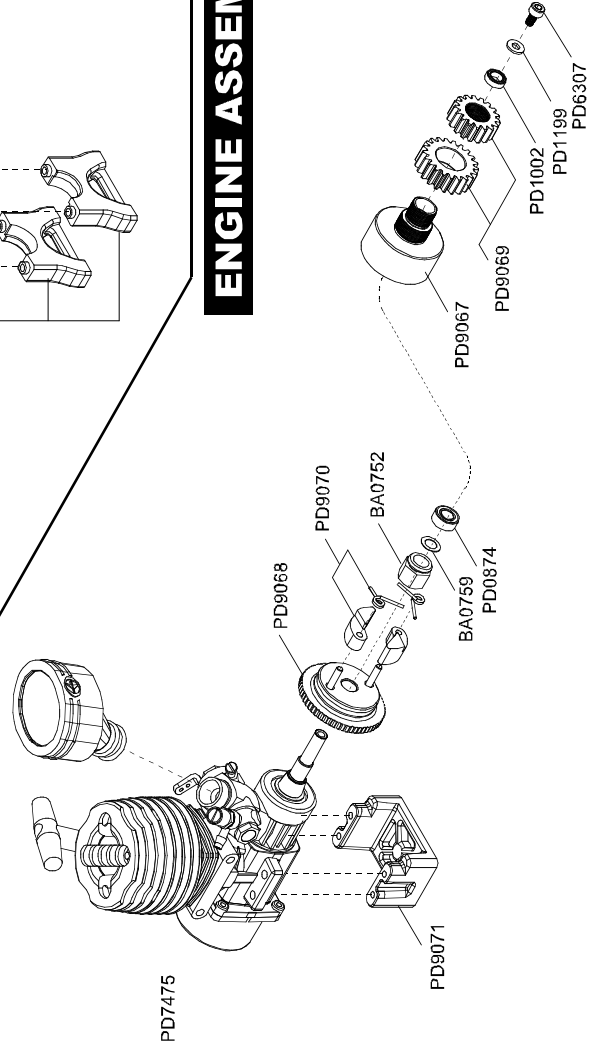


BELLCRANK ASSEMBLY

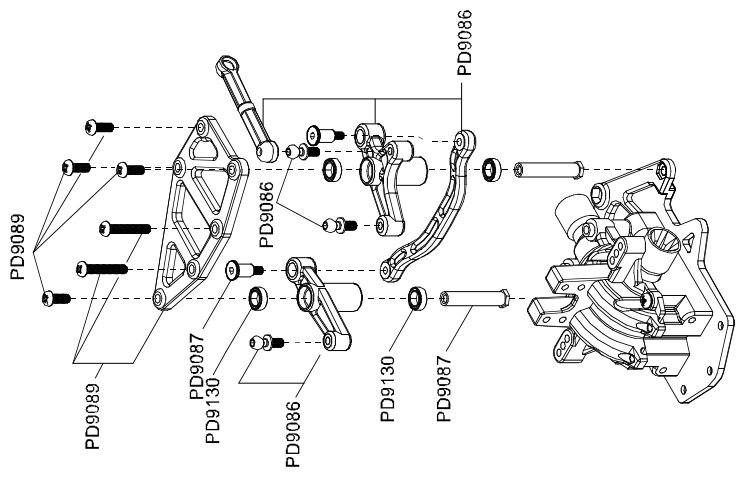


TOMAHAWK VX PART LIST

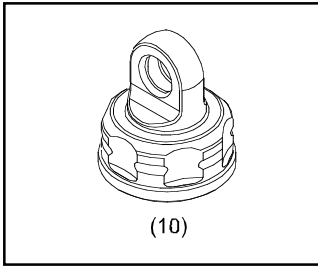


PD8088 SHOCK CAP
避震器上蓋

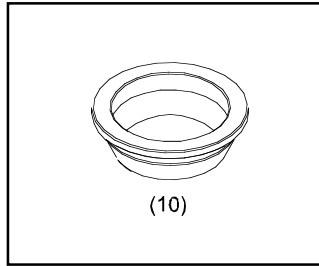


PD8093 SHOCK BLADDER
避震器空氣活門

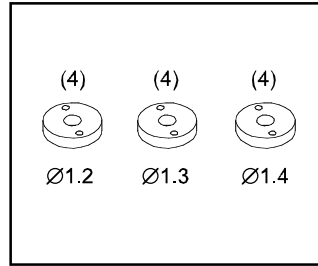


PD8098 SHOCK PISTON SET
活塞

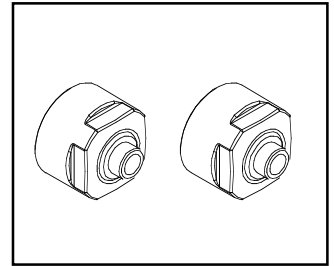


PD9051 DIFFERENTIAL CASE
差速器本體

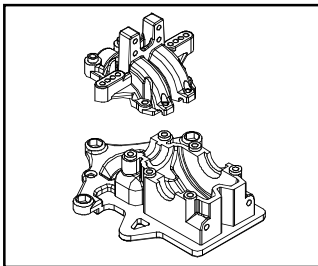


PD9052 REAR BULK SET
後差速箱上下蓋組

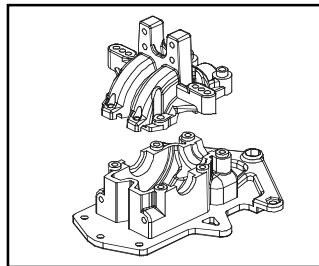


PD9053 FRONT BULK SET
前差速箱上下蓋組

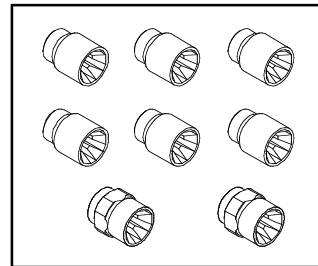


PD9054 OUTDRIVE CUP SET
傳動軸套

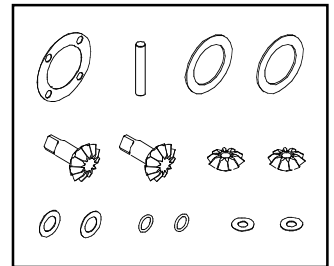


PD9055 DIFFERENTIAL GEAR SET
差速組齒輪

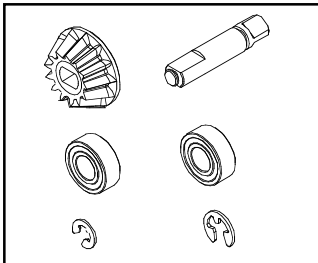


PD9057 DRIVE PINION SET 13T
差速小傘齒 (13T)

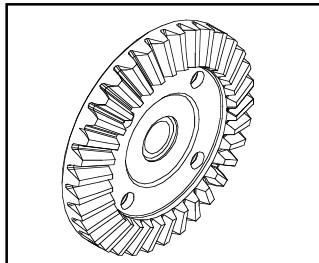


PD9058 DIFF SPUR GEAR 34T
差速大傘齒 (34T)

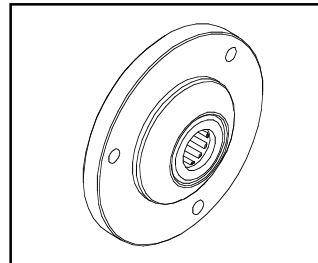


PD9059 ONE WAY BEARING SET
單向軸承座組

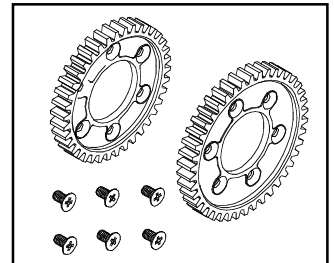


PD9060 1ST/2ND SPUR GEAR
主齒輪組

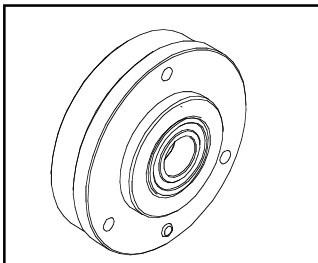


PD9061 2 SPD. CLUTCH HUB
兩段變速本體

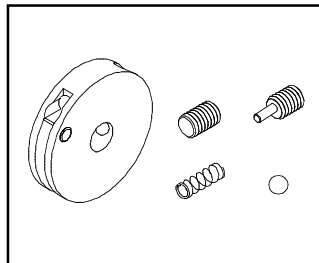


PD9062 2 SPD. CLUTCH SET
甩片座組

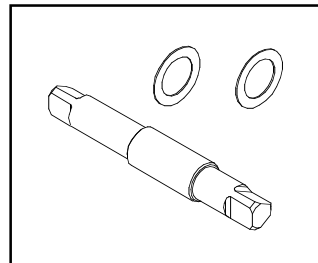


PD9063 2 SPD. DRIVE SHAFT
兩段變速軸

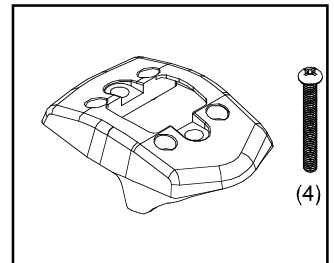


PD9064 CTR DIFF. COVER
中差座上蓋

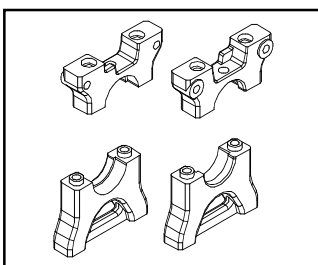


PD9065 CTR DIFF. MOUNT
中差座

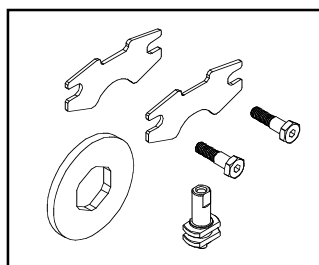


PD9066 DISC BRAKE SET
剎車組

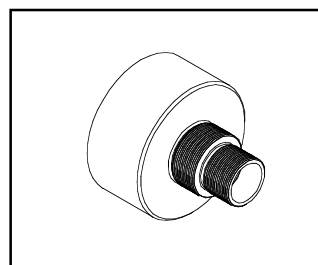


PD9067 2 SPD. CLUTCH BELL
離合器罩

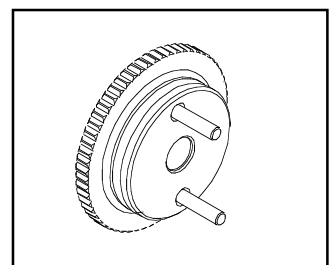


PD9068 FLY WHEEL
飛輪組

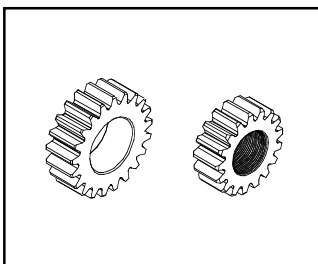


PD9069 1ST/2ND PINION GEAR
離合器齒輪

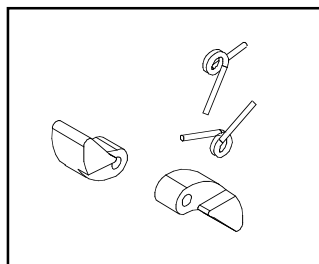

PD9070 CLUTCH SHOE SET
離合器甩塊組

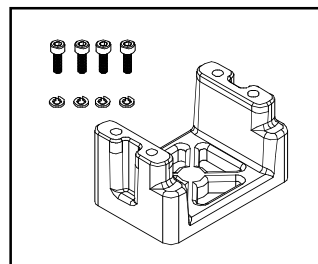


PD9071 ENGINE MOUNT
引擎固定座

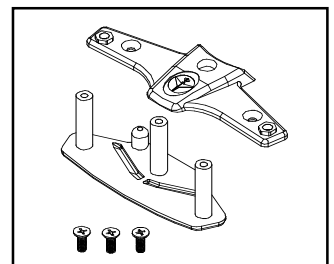


PD9072 BUMPER SET
前防撞板


TOMAHAWK VX PART LIST

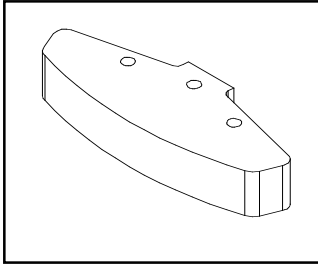


PD9073 URETHANE BUMPER
防撞泡綿

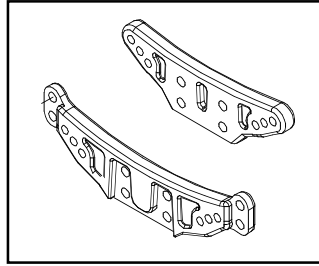


PD9074 SHOCK TOWER SET
避震器支架

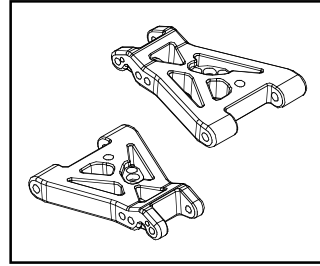


PD9075 FRONT SUSP. ARMS
前擺臂組

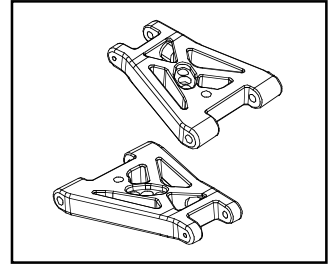


PD9076 REAR SUSP. ARMS
後擺臂組

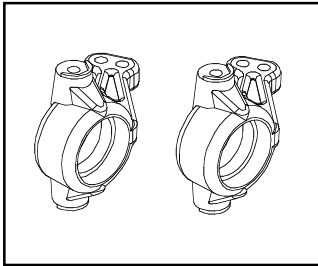


PD9077 STEERING BLOCK SET
轉向臂

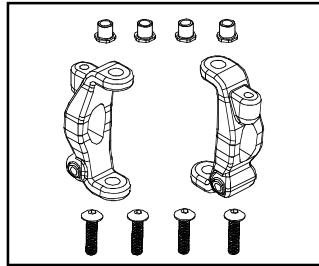


PD9078 CASTER BLOCK SET
C型座組

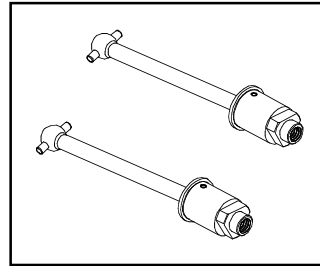


PD9079 FRONT UNINI SHAFT
前傳動軸

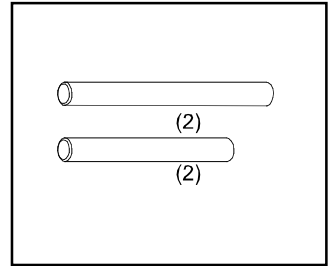


PD9080 OUTER HINGE PIN SET
軸承針組

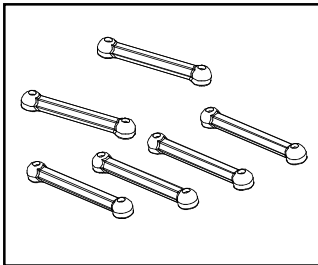


PD9081 UPPER LINK SET
拉桿組

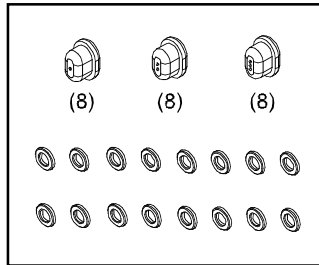


PD9082 SUSP. ARM MOUNT BUSHING
擺臂軸套

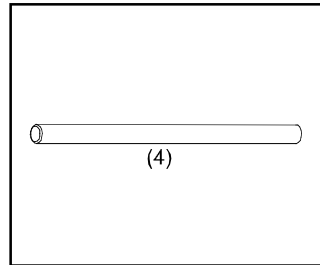


PD9083 INNER HINGE PIN SET
擺臂軸

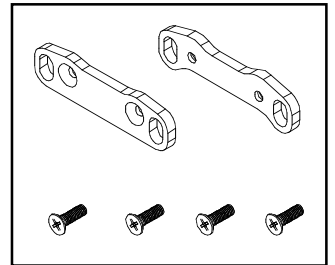


PD9084 FRONT TOE PLATE
前投影板(0°)

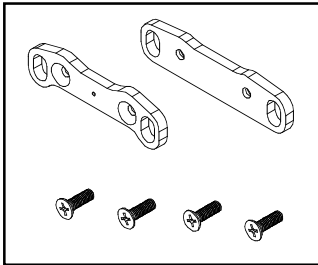


PD9085 REAR TOE PLATE
後投影板(2.5°)

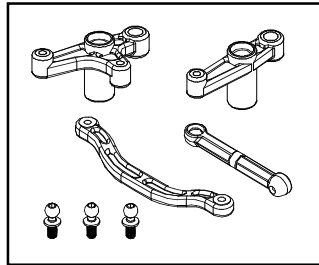


PD9086 SWING RACK SET
轉向曲柄組

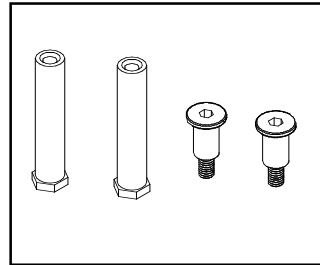


PD9087 SWING POST SCREW
轉向軸

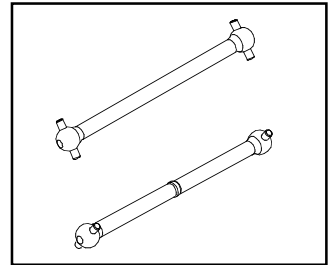


PD9088 CTR. DRIVE SHAFT SET
中央傳動軸

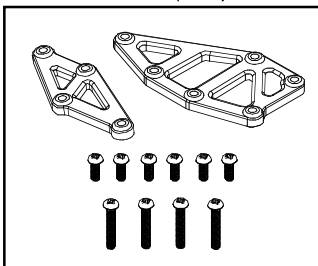


PD9089 CHASSIS BRACE SET
補強板組

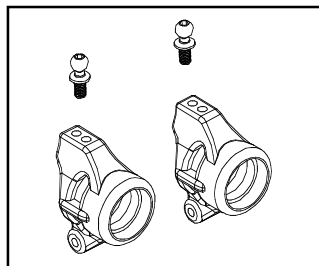


PD9090 HUB CARRIER SET
後輪座

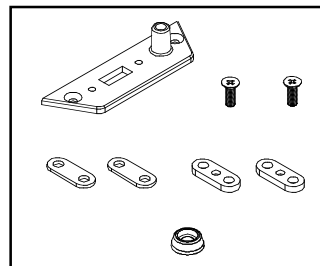


PD9091 SWITCH PLATE & SPACERS
開關盒蓋&墊片組

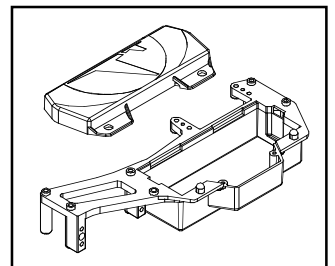


PD9092 RADIO TRAY
接收機盒

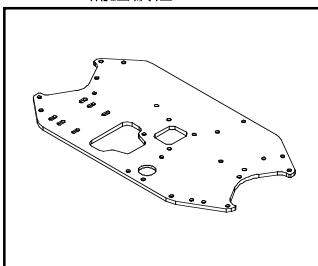


PD9093 CHASSIS
車底盤

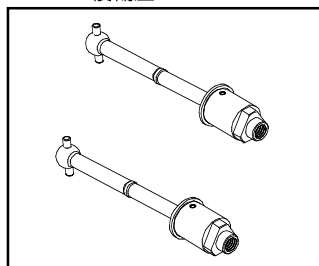

PD9094 REAR UNINI SHAFT
後傳動軸

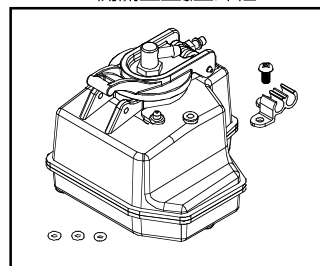


PD9095 FUEL TANK
油箱組

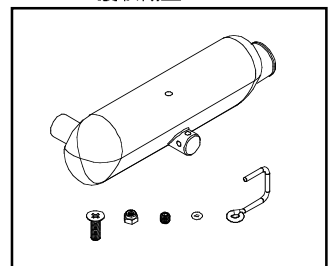


PD9096 MUFFLER
消音器


TOMAHAWK VX PART LIST

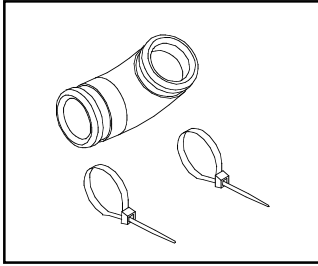


PD9097 SILICONE TUBING
彎管接頭

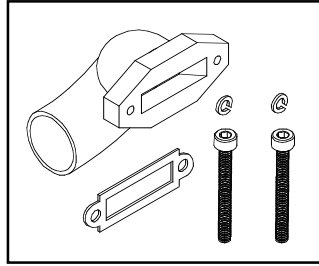


PD9098 MANIFOLD
排氣彎管

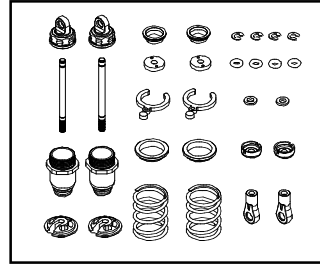


PD9099 SHOCK SET
避震器組

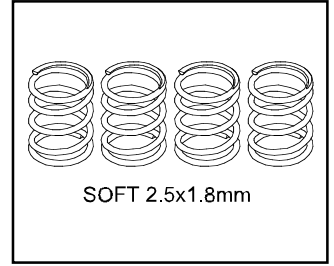


PD9100 SHOCK SPRING BLUE
避震器彈簧, 藍(中軟)

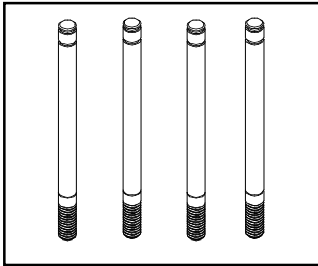


PD9101 SHOCK SHAFT
避震器軸

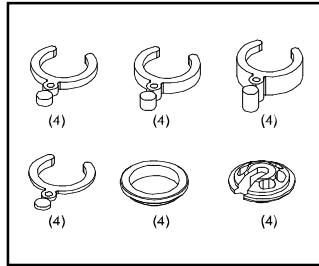


PD9102 SHOCK ACCESSORIES
避震器配件

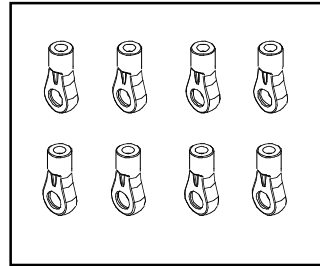


PD9103 SHOCK EYELET
避震器球頭拉桿

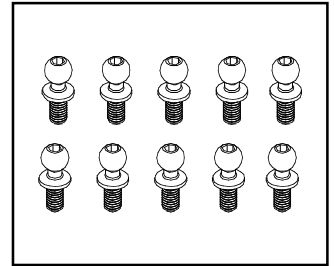


PD9104 BALL STUD (L)
球頭座(長)

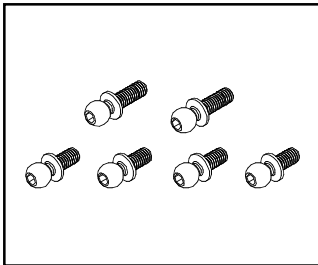


PD9105 BALL STUD (S)
球頭座(短)

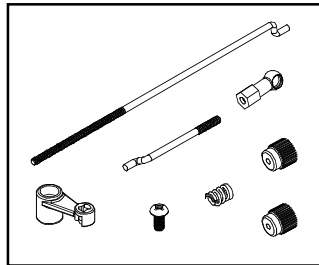


PD9106 TH/BK LINKAGE SET
油門煞車拉桿組

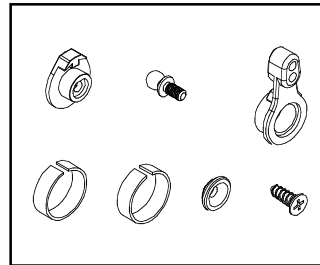


PD9107 STEERING SERVO HORN SET
轉向拉桿緩衝組

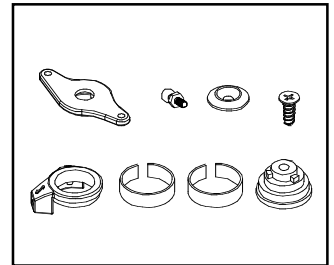


PD9108 TH/BK SERVO HORN SET
油門拉桿緩衝組

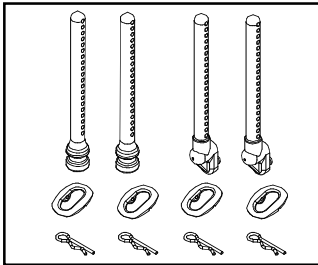


PD9109 BODY POST SET
車殼支柱

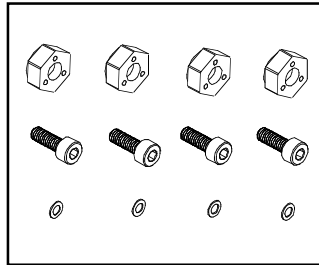


PD9110 HEX ADAPTER SET
六角輪鼓轉換座組

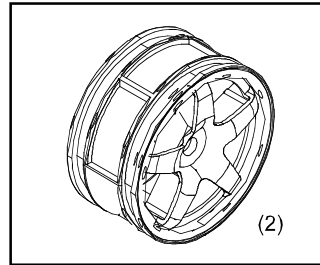


PD6601-R 5-SPK WHEEL 26mm(C/R)
5爪輪鼓, 26mm(電鍍紅)

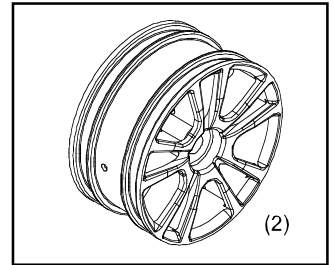


PD9112 10-SPK WHL 26mm(BLACK)
10爪輪鼓, 26mm(黑)

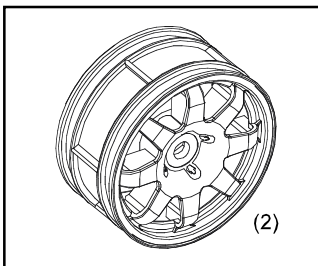

PD9113 8-SPK WHL 26mm(BLACK)
8爪輪鼓, 26mm(黑)

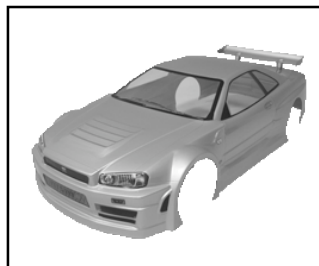

PD9114 PAINTED BODY SET
完成車殼, SKYLINE Z-TUNE

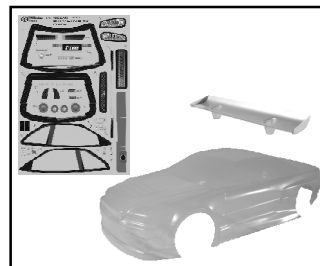


PD9115 CLEAR BODY W/DECAL
透明車殼及貼紙, SKYLINE Z-TUNE




PD9116 DECAL SET
貼紙, SKYLINE Z-TUNE



PD9117 PAINTED BODY SET
完成車殼, NISSAN 350Z

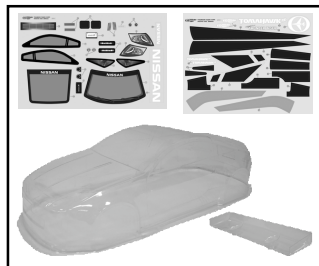

PD9118 CLEAR BODY W/DECAL
透明車殼及貼紙, NISSAN 350Z

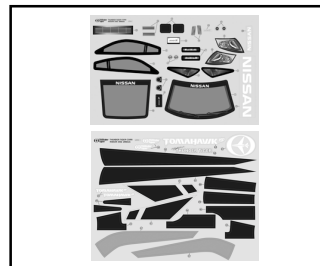

PD9119 DECAL SET
貼紙, NISSAN 350Z



PD9120 PAINTED BODY SET
完成車殼, Nismo GT-R (R34)


TOMAHAWK VX PART LIST




PD9121 CLEAR BODY W/DECAL Nismo GT-R (R34)
透明車殼及貼紙



PD9122 DECAL SET Nismo GT-R (R34)
貼紙

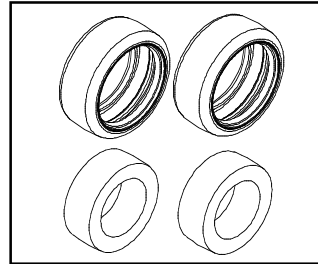


PD9134 1/10 SLICK TIRE W/FOAM
光頭胎26mm

 


PD9131 M2.6x 10(20)
PD9132 M2.6x12(20)

 CTP. TAP SCREW
平頭墊圈十字螺絲




PD1569 2.5mm(20)
PD0978 4mm(20)

 E-CLIP
E型扣環




PD1683 M3x10B (20)
PD9133 M2x4B(20)

 BT P. TAP SCREW
圓頭十字墊圈螺絲




PD8178 D2.9xW1.78(20)

 O-RING
O型環




PD0980 3mm

 SPRING WASHER
彈簧墊圈




PD0982 SMALL(20)

 NYLON STRAP SMALL
固定束帶




PD0668 M3x10 (20)
PD0669 M3x12 (20)

 BT M. SCREW
半圓頭內六角螺絲




PD0973 D4 (20)
PD1199 D3B (20)

 WASHER
華司




PD7193 HNLR5 (20)

 BODY CLIPS
R型插銷




PD1244 3mm

LOCK NUT
止鬆螺帽

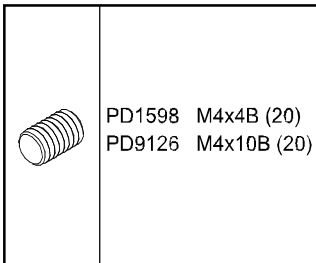


PD1598 M4x4B (20)
PD9126 M4x10B (20)

SET SCREW
無頭內六角螺絲

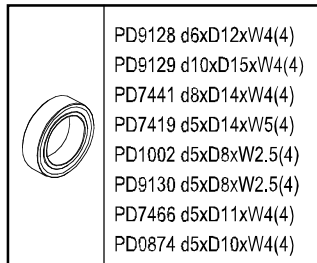


PD9128 d6xD12xW4(4)
PD9129 d10xD15xW4(4)
PD7441 d8xD14xW4(4)
PD7419 d5xD14xW5(4)
PD1002 d5xD8xW2.5(4)
PD9130 d5xD8xW2.5(4)
PD7466 d5xD11xW4(4)
PD0874 d5xD10xW4(4)

BALL BEARING
滾珠軸承

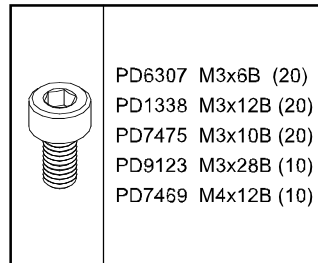


PD6307 M3x6B (20)
PD1338 M3x12B (20)
PD7475 M3x10B (20)
PD9123 M3x28B (10)
PD7469 M4x12B (10)

SKH.M SCREW
內六角螺絲

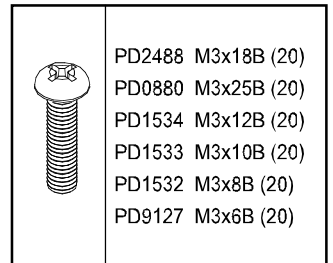

PD2488 M3x18B (20)
PD0880 M3x25B (20)
PD1534 M3x12B (20)
PD1533 M3x10B (20)
PD1532 M3x8B (20)
PD9127 M3x6B (20)

BHP SCREW
圓頭十字螺絲

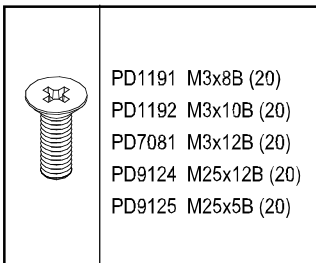

PD1191 M3x8B (20)
PD1192 M3x10B (20)
PD7081 M3x12B (20)
PD9124 M25x12B (20)
PD9125 M25x5B (20)

CT P.M.SCREW
平頭十字螺絲



TOMAHAWK VX PARTS LIST

PART#	DESCRIPTION	中文名稱	NOTE
PD9051	FRONT BULK SET	前差速箱上下蓋組	
PD9052	REAR BULK SET	後差速箱上下蓋組	
PD9053	OUTDRIVE CUP SET	傳動軸套	
PD9054	DIFFERENTIAL CASE	差速器本體	
PD9055	DIFFERENTIAL GEAR SET	差速組齒輪	
PD9057	DRIVE PINION SET 13T	差速小傘齒(13T)	
PD9058	DIFF SPUR GEAR 34T	差速大傘齒(34T)	
PD9059	ONE WAY BEARING SET	單向軸承座組	
PD9060	1ST/2ND SPUR GEAR,43/38	主齒輪組(43/38T)	
PD9061	2 SPD. CLUTCH HUB	兩段變速本體	
PD9062	2 SPD. CLUTCH SET	甩片座組	
PD9063	2 SPD. DRIVE SHAFT	兩段變速軸	
PD9064	CTR DIFF. COVER	中差座上蓋	
PD9065	CTR DIFF. MOUNT	中差座	
PD9066	DISC BRAKE SET	剎車組	
PD9067	2 SPD. CLUTCH BELL	離合器罩	
PD9068	FLY WHEEL	飛輪組	
PD9069	1ST/2ND PINION ,17/22 GEAR	離合器齒輪	
PD9070	CLUTCH SHOE SET	離合器甩塊組	
PD9071	ENGINE MOUNT	引擎固定座	
PD9072	BUMPER SET	前防撞板	
PD9073	URETHANE BUMPER	防撞泡綿	
PD9074	SHOCK TOWER SET	避震器支架	
PD9075	FRONT SUSP. ARMS	前擺臂組	
PD9076	REAR SUSP. ARMS	後擺臂組	
PD9077	STEERING BLOCK SET	轉向臂	
PD9078	CASTER BLOCK SET	C型座組	
PD9079	FRONT UNIVERSAL SHAFT	前傳動軸	
PD9080	OUTER HINGE PIN SET	軸承針組	
PD9081	UPPER LINK SET	拉桿組	
PD9082	SUSP. ARM MOUNT BUSHING	擺臂軸套	
PD9083	INNER HINGE PIN SET	擺臂軸	
PD9084	FRONT TOE PLATE,0°	前投影板(0度)	
PD9085	REAR TOE PLATE,2.5°	後投影板(2.5度)	
PD9086	SWING RACK SET	轉向曲柄組	
PD9087	SWING POST SCREW	轉向軸	
PD9088	CTR. DRIVE SHAFT SET	中央傳動軸	
PD9089	CHASSIS BRACE SET	補強板組	
PD9090	HUB CARRIER SET	後輪座	
PD9091	SWITCH PLATE & SPACERS	開關盒蓋&墊片組	
PD9092	RADIO TRAY	接收機盒	
PD9093	CHASSIS	車底盤	
PD9094	REAR UNIVERSAL SHAFT	後傳動軸	
PD9095	FUEL TANK	油箱組	
PD9096	MUFFLER	消音器	
PD9097	SILICONE TUBING	彎管接頭	
PD9098	MANIFOLD	排氣彎管	
PD9099	SHOCK SET	避震器組	
PD9100	SHOCK SPRING,(2.5x1.8mm),BLUE	避震器彈簧(2.5x1.8mm)藍	SOFT軟
PD9101	SHOCK SHAFT	避震器軸	
PD9102	SHOCK CAP & SPRING COLLAR	避震器上蓋	
PD9103	SHOCK EYELET	避震器球頭拉桿	
PD9104	BALL STUD,L	球頭座,長	
PD9105	BALL STUD,S	球頭座,短	
PD9106	TH/BK LINKAGE SET	油門煞車拉桿組	
PD9107	STEERING SERVO HORN SET	轉向拉桿緩衝組	
PD9108	TH/BK SERVO HORN SET	油門拉桿緩衝組	
PD9109	BODY POST SET	車殼支柱	
PD9110	HEX ADAPTER SET	六角輪鼓轉換座組	




TOMAHAWK VX PARTS LIST

PART#	DESCRIPTION	中文名稱	NOTE
PD9111	5-SPK WHEEL ,26mm(CHROME/RED)	5爪輪殼 ,26mm (電鍍紅)	
PD6601-R	10-SPK WHL ,26mm(BLACK)	10爪輪殼 ,26mm (黑)	
PD9113	8-SPK WHL,26mm(BLACK)	8爪輪殼 ,26mm (黑)	


PD9114	PAINTED Z-TUNE	完成車殼 , Z-TUNE	
PD9115	CLEAR Z-TUNE W/DECAL	透明車殼及貼紙 , Z-TUNE	
PD9116	Z-TUNE DECAL SET	貼紙 , Z-TUNE	
PD9117	PAINTED 350Z	完成車殼車殼 , 350Z	
PD9118	CLEAR 350Z W/DECAL	透明車殼及貼紙 , 350Z	
PD9119	350Z DECAL SET	貼紙 , 350Z	
PD9120	PAINTED NISMO GT-R R34	完成車殼車殼 , NISMO GT-R R34	
PD9121	CLEAR NISMO GT-R R34 W/DECAL	透明車殼及貼紙 , NISMO GT-R R34	
PD9122	NISMO GT-R R34 DECAL SET	貼紙 , NISMO GT-R R34	

PD9123	SKH.M SCREW(20),M3x28	內六角螺絲(20),M3x28	
PD9124	CT P.M.SCREW(20),M25x12	平頭十字螺絲(20),M25x12	
PD9125	CT P.M.SCREW(20),M25x5	平頭十字螺絲(20),M25x5	
PD9126	SET SCREW,M4x10	無頭內六角螺絲,M4x10	
PD9127	BHP SCREW,M3x6	圓頭十字螺絲,M3x6	
PD9128	BALL BEARING(4),6x12x4	滾珠軸承(4),6x12x4	
PD9129	BALL BEARING(4),10x15x4	滾珠軸承(4),10x15x4	
PD9130	BALL BEARING,5x8x2.5mm	滾珠軸承,5x8x2.5mm	
PD9131	CTP. TAP SCREW(20) ,M26x10	平頭墊圈十字螺絲(20) ,M26x10	
PD9132	CTP. TAP SCREW(20) ,M26x12	平頭墊圈十字螺絲(20) ,M26x12	
PD9133	BT P. TAP SCREW ,M2x4	圓頭十字螺絲,M2x4	
PD9134	1/10 SLICK TIRE W/FOAM,26mm	光頭胎,26mm	
PD0669	BT M. SCREW(20),M3x12	半圓頭內六角螺絲(20),M3x12	
PD0880	BT P.M. SCREW(20),M3x25	圓頭十字螺絲(20),M3x25	
PD0874	BALL BEARING SET, d5xD10xW4	滾珠軸承, d5xD10xW4	
PD0882	SET SCREW(20), M4x6	無頭內六角螺絲(20), M4x6	
PD0961	SET SCREW(20), M3x3	無頭內六角螺絲(20), M3x3	
PD0973	WASHER 4mm	華司 4mm	
PD0978	E-CLIP(20), 4mm	E型扣環(20), 4mm	
PD0980	SPRING WASHER	彈簧墊圈	
PD1002	BALL BEARING SET d5xD8xW2.5	滾珠軸承 d5xD8xW2.5	
PD1191	CTP.M.SCREW(20),M3x8	平頭十字螺絲(20),M3x8	
PD1192	CTP.M.SCREW(20),M3x10	平頭十字螺絲(20),M3x10	
PD1244	LOCK NUT, M3	止鬆螺帽, M3	
PD1338	SKH.M SCREW(20),M3x12	內六角螺絲(20),M3x12	
PD1532	BT P.M. SCREW(20),M3x8	圓頭十字螺絲(20),M3x8	
PD1533	BT P.M. SCREW(20),M3x10	圓頭十字螺絲(20),M3x10	
PD1534	BT P.M. SCREW(20),M3x12	圓頭十字螺絲(20),M3x12	
PD1569	E-CLIP(20),2.5mm	E型扣環(20),2.5mm	
PD1598	SET SCREWS(20),M4x4	無頭內六角螺絲(20),M4x4	
PD1683	BT P. TAP SCREW ,M3x10	圓頭十字墊圈螺絲 ,M3x10	
PD2488	BT P.M. SCREW(20),M3x18	圓頭十字螺絲(20),M3x18	
PD6307	SK H.M SCREW (20),M3x6	內六角螺絲 (20),M3x6	
PD7081	CTP.M.SCREW(20),M3x12	平頭十字螺絲(20),M3x12	
PD7193	BODY CLIPS, HNLR5	R型插銷	
PD7419	BALL BEARING SET, d5xD14xW5	滾珠軸承, d5xD14xW5	
PD7441	BALL BEARING SET, d8xD14xW4	滾珠軸承, d8xD14xW4	
PD7466	BALL BEARING SET, d5xD11xW4	滾珠軸承, d5xD11xW4	
PD7469	SKH.M SCREW(10),M4x12	內六角螺絲(10),M4x12	
PD7475	SKH.M SCREW(10),M3x10	內六角螺絲(10),M3x10	
PD8178	O-RING	O型環	


TOMAHAWK VX OPTION PART LIST

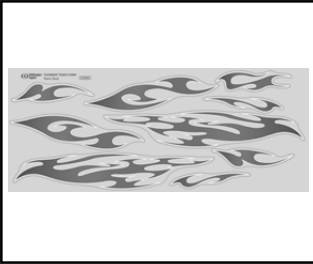

PD9140 FLAME DECAL, BLUE
火焰貼紙, 藍

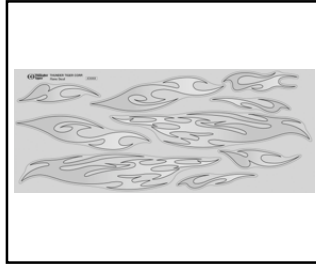


PD9141 FLAME DECAL, YELLOW
火焰貼紙, 黃

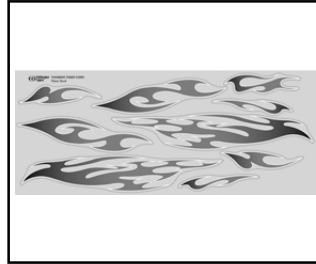

PD9142 FLAME DECAL, RED
火焰貼紙, 紅




PD9143 CFRP BUMPER TOP PLATE
前防撞上板

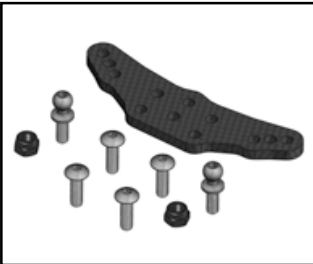


PD9144 CFRP FRONT SHOCK TOWER
後避震器支架




PD9145 CFRP REAR SHOCK TOWER
差速箱下蓋板

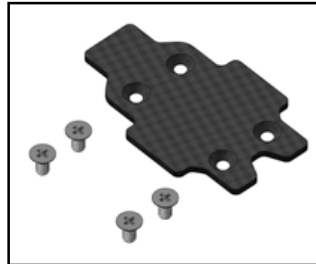


PD9146 CFRP BULK LOWER COVER
前補強板

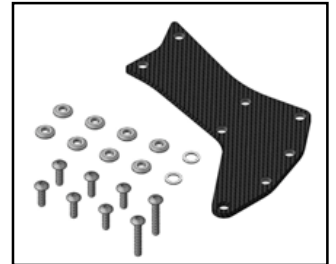


PD9147 CFRP FR CHASSIS BRACE
後補強板

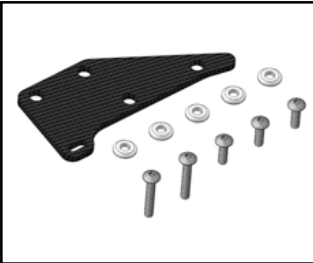


PD9148 CFRP RR CHASSIS BRACE
後投影板

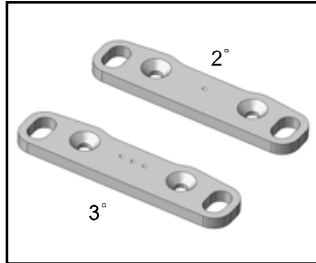


PD9149 ALUM. REAR TOE BLOCK
前投影板(2°/3°)

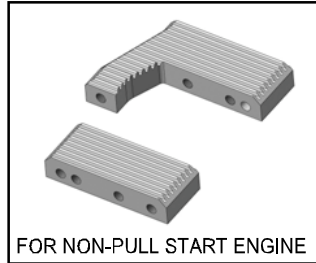

PD9150 LIGHTENED ENG. MOUNT
引擎固定座(非手拉引擎)

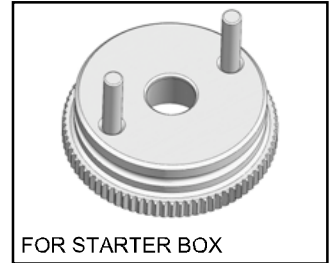

PD9151 FLYWHEEL(STR BOX)
飛輪組(適用起動台)

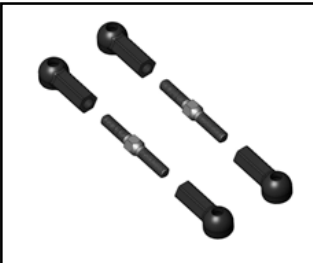

PD9153 ALUMINUM TURNBUCKLE SET
轉向調整拉桿組




PD9154 ALUMINUM UPPER ROD
上擺臂拉桿組




PD9155 ALUMINUM SHOCK SET
避震器套筒組




PD9156 HEX WHL CAP SCREW
六角輪胎固定螺絲

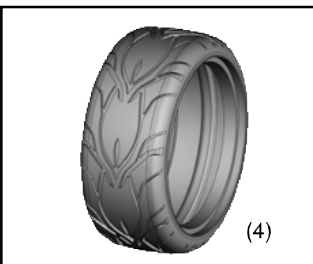

PD9158 FIRE BLADE TIRE 26mm
高速火炎輪胎

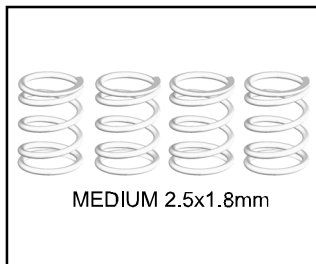


PD9159 SHOCK SPRING, YELLOW
避震器彈簧, 黃(適中)

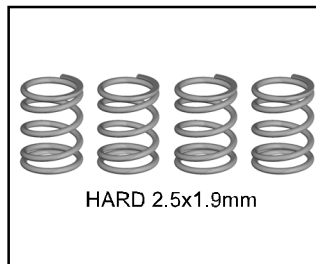


PD9160 SHOCK SPRING, RED
避震器彈簧, 紅(中硬)



PD9161 SHOCK SPRING, BLACK
避震器彈簧, 黑(特硬)

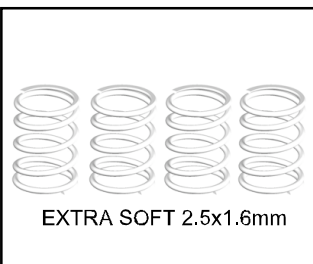

PD9162 SHOCK SPRING, WHITE
避震器彈簧, 白(特軟)

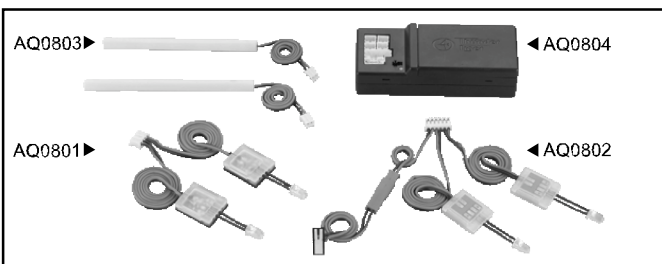

NO.2705 LED LIGHTING KIT
LED改裝燈組



NO.1340 ROTATING CAR STAND
旋轉車架

PART#	DESCRIPTION	中文名稱	NOTE
PD9140	FLAME DECAL, BLUE	火焰貼紙, 藍	
PD9141	FLAME DECAL, YELLOW	火焰貼紙, 黃	
PD9142	FLAME DECAL, RED	火焰貼紙, 紅	
PD9143	CFRP BUMPER TOP PLATE	前防撞上板	
PD9144	CFRP FRONT SHOCK TOWER	前避震器支架	
PD9145	CFRP REAR SHOCK TOWER	後避震器支架	
PD9146	CFRP BULK LOWER COVER	差速箱下蓋板	
PD9147	CFRP FR CHASSIS BRACE	前補強板	
PD9148	CFRP RR CHASSIS BRACE	後補強板	
PD9149	ALUM REAR TOE PLATE, 2°/3°	後投影板 (2°/3°)	
PD9150	LIGHTENED ENG. MOUNT(NON-PULL START)	引擎固定座 (適用非手拉引擎)	
PD9151	FLYWHEEL(STR BOX)	飛輪組 (適用起動台)	
PD9153	ALUMINUM TURNBUCKLE SET	轉向調整拉桿組	
PD9154	ALUMINUM UPPER ROD	上擺臂拉桿組	
PD9155	ALUMINUM SHOCK SET	避震器套筒組	
PD9156	HEX WHL CAP SCREW	六角輪胎固定螺絲	
PD9158	FIRE BLADE TIRE 26mm	高速火炎輪胎	
PD9159	SHOCK SPRING(2.5x1.8mm),YELLOW	避震器彈簧(2.5x1.8mm), 黃	MEDIUM 適中
PD9160	SHOCK SPRING(2.5x1.9mm),RED	避震器彈簧(2.5x1.9mm), 紅	HARD 硬
PD9161	SHOCK SPRING(2.5x2.0mm),BLACK	避震器彈簧(2.5x2.0mm), 黑	EXTRA HARD 中硬
PD9162	SHOCK SPRING(2.5x1.6mm),WHITE	避震器彈簧(2.5x1.6mm), 白	EXTRA SOFT 中軟


WHEEL & TIRE OPTION PART LIST



5-SPOKE WHEEL 5爪輪殼組
PD6601-L C/BLUE 雙色電鍍藍, 26mm
PD6601-P C/PURPLE 雙色電鍍紫, 26mm
PD6601-Y C/YELLOW 雙色電鍍黃, 26mm



RACING DISH WHEEL 蝶式輪殼
PD7649 WHITE 白色, 26mm
PD7650 WHITE 白色, 30mm

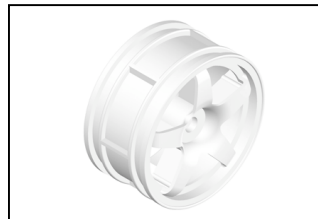

5-SPOKE WHEEL 5爪輪殼組
PD6681 CHROME 電鍍銀, 26mm
PD6682 WHITE 白色, 26mm
PD6682-B BLACK 黑色, 26mm



10爪輪殼
PD7699 WHITE 白色, 26mm
PD7770 WHITE 白色, 30mm



SPRINT DRIFT TIRE 疾速甩尾胎
PD7643, 26mm
PD7644, 30mm



PULSE DRIFT TIRE 脈衝甩尾胎
PD7645, 26mm
PD7646, 30mm



HIGH GRIP TIRE, 高掙地力胎, 26mm
PD1784, 26mm

PART#	DESCRIPTION	中文名稱	NOTE
PD6601-L	5-SPOKE WHEEL(C/BLUE),26mm	5爪輪殼組, 26mm (雙色電鍍藍)	
PD6601-P	5-SPOKE WHEEL(C/PURPLE),26mm	5爪輪殼組, 26mm (雙色電鍍紫)	
PD6601-Y	5-SPOKE WHEEL(C/YELLOW),26mm	5爪輪殼組, 26mm (雙色電鍍黃)	
PD6681	5-SPOKE WHEEL(CHROME),26mm	5爪輪殼組, 26mm (電鍍銀)	
PD6682	5-SPOKE WHEEL(WHITE),26mm	5爪輪殼組, 26mm (白)	
PD6682-B	5-SPOKE WHEEL(BLACK),26mm	5爪輪殼組, 26mm (黑)	
PD7649	RACING DISH WHEEL(WHITE),26mm	蝶式輪殼, 26mm (白)	
PD7650	RACING DISH WHEEL(WHITE),30mm	蝶式輪殼, 30mm (白)	
PD7699	10-SPK SPORT WHEEL(WHITE),26mm	10爪輪殼, 26mm (白)	
PD7700	10-SPK SPORT WHEEL(WHITE),30mm	10爪輪殼, 30mm (白)	
PD1784	HIGH GRIP TIRE,26mm	高掙地力胎, 26mm	
PD7643	SPRINT DRIFT TIRE, 26mm	疾速甩尾胎, 26mm	
PD7644	SPRINT DRIFT TIRE, 30mm	疾速甩尾胎, 30mm	
PD7645	PULSE DRIFT TIRE, 26mm	脈衝甩尾胎, 26mm	
PD7646	PULSE DRIFT TIRE, 30mm	脈衝甩尾胎, 30mm	

